

ACCESSORY FITMENT

Product

VW Amarok Facelift PDC Nudge Bar

Part no.

(VW-AMFL-NBPDC-S); (VW-AMFL-NBPDC-B); (BS-250021); (250021T) TN:30



60 -120
Minutes

Models :

Page 1 of 8

Date :18/09/2017

DIAGRAM

Kit content:



	Qty	Description		Qty	Description
A	2	M8x25 Button Heads	O	2	Joiner brackets
B	2	M8 Hex nuts	P	1	Nudge bar
C	2	M8 spring washers			
D	4	M8x20x1.6 Flat washers			
E	10	M10 Hex nuts			
F	12	M10 Spring washers			
G	12	M10x30x2 Flat washers			
H	4	M10x30 Sets			
I	2	M10x40x3 Flat washers			
J	2	U bolts 135x100(big)			
K	2	U bolts 115x105(small)			
L	2	PS and DS Bottom mount brackets			
M	2	PS and DS Top mount brackets			

Additional equipment/Material needed for fitment :


Qty			Qty	
1	Spanner Set			
1	Screw driver set		1	Masking tape
1	torque wrench			
1	Ratchet set			

Precautions during fitment:

Ensure you have adequate working space. Requires at least two people. Ensure that the correct tools and appropriate clothing are used with installation.

Fitment Instruction:
Amarok Facelift PDC Nudge Bar

Visual / Graphic Illustration

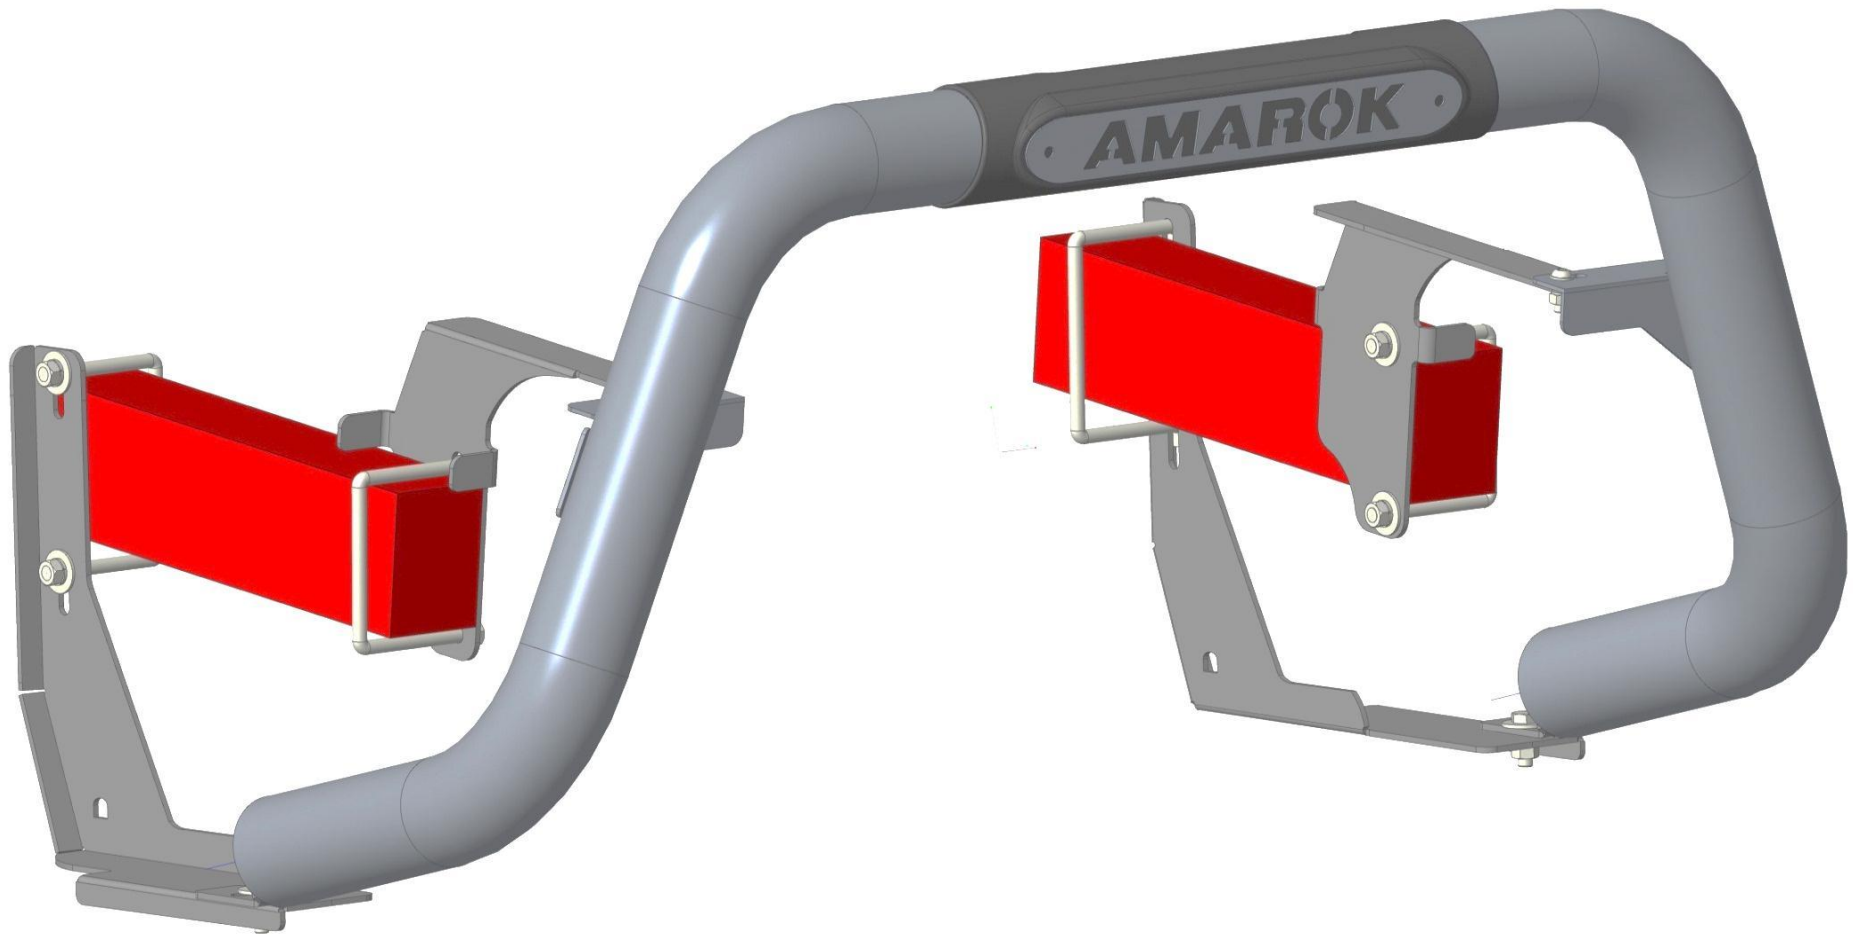

Fitment Instruction: Amarok Facelift PDC Nudge Bar

Visual / Graphic Illustration

FIG 1



Step #

Description/Method

1

Remove the Bumper carefully. Remember to unclip the PDC harness clips. FIG 1.


2

Tape up the bumper.



Fitment Instruction: Amarok Facelift PDC Nudge Bar

Visual / Graphic Illustration

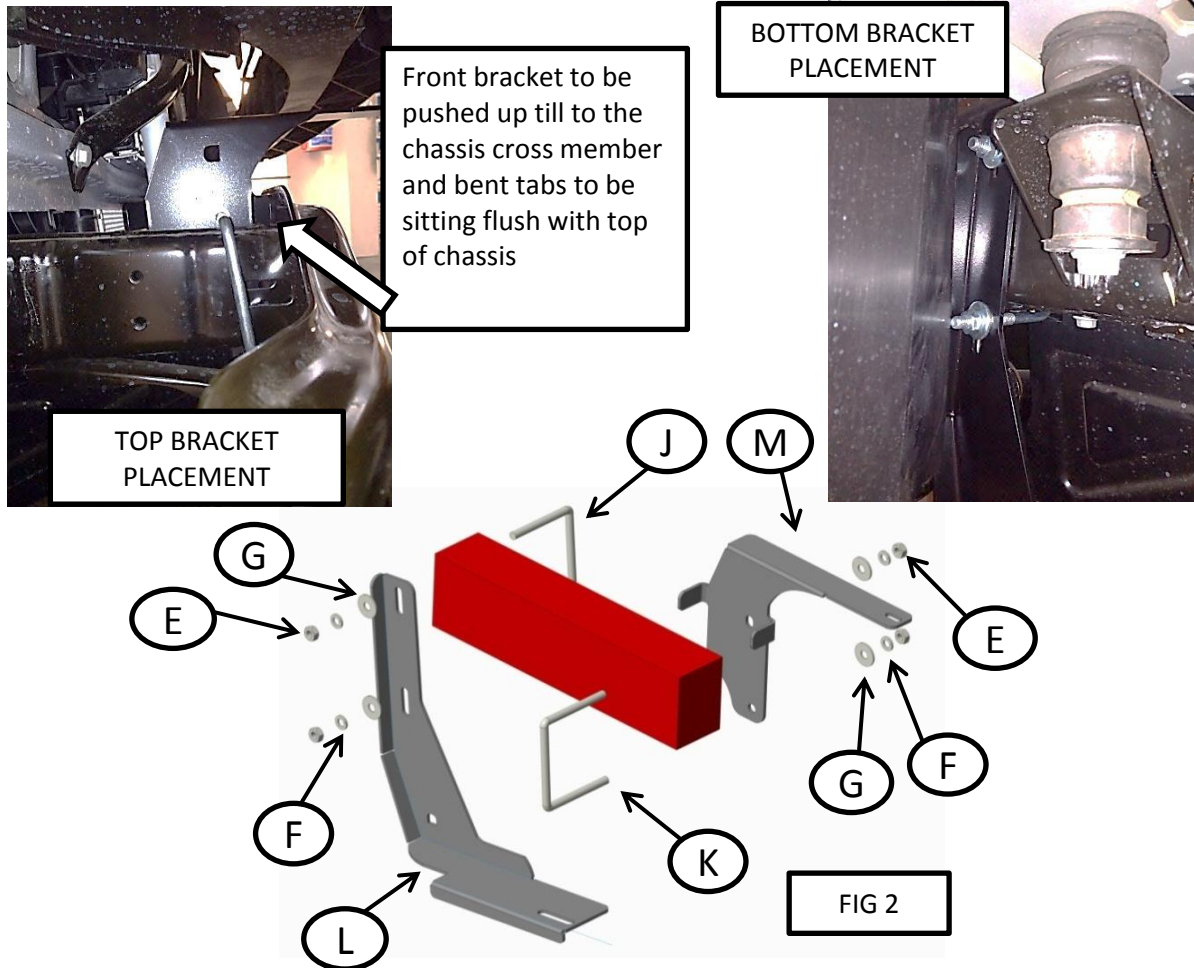

Step #

Description/Method

3




DRIVERS SIDE SHOWN. Using the two U-bolts and kit shown in FIG 2, fit the top and bottom brackets. Fully tighten the Top bracket. Leave the bottom bracket slightly loose.

The bottom bracket will be moved into the correct position when the nudge bar is placed on the vehicle.

4

Do the same to the passengers side of the vehicle.

Fitment Instruction: Amarok Facelift PDC Nudge Bar

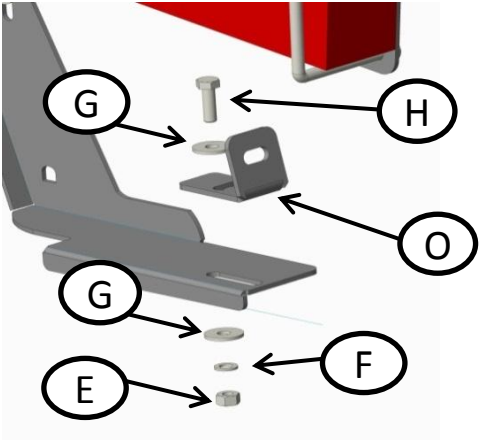Visual / Graphic Illustration	Step #	Description/Method
 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">FIG 3</div>	5	<p>Carefully refit the front bumper over the protruding brackets. The brackets must stick out the bumper as shown in FIG 3. It is advised to tape up this area to prevent scratches.</p>
	6	<p>Fit joiner bracket to the drivers and passengers side using the kit shown in FIG 4. Don't fully tighten.</p>
 <div style="border: 1px solid black; padding: 2px; display: inline-block; margin-left: 10px;">FIG 4</div>		


Fitment Instruction: Amarok Facelift PDC Nudge Bar

Visual / Graphic Illustration

Step #

Description/Method

FIG 5

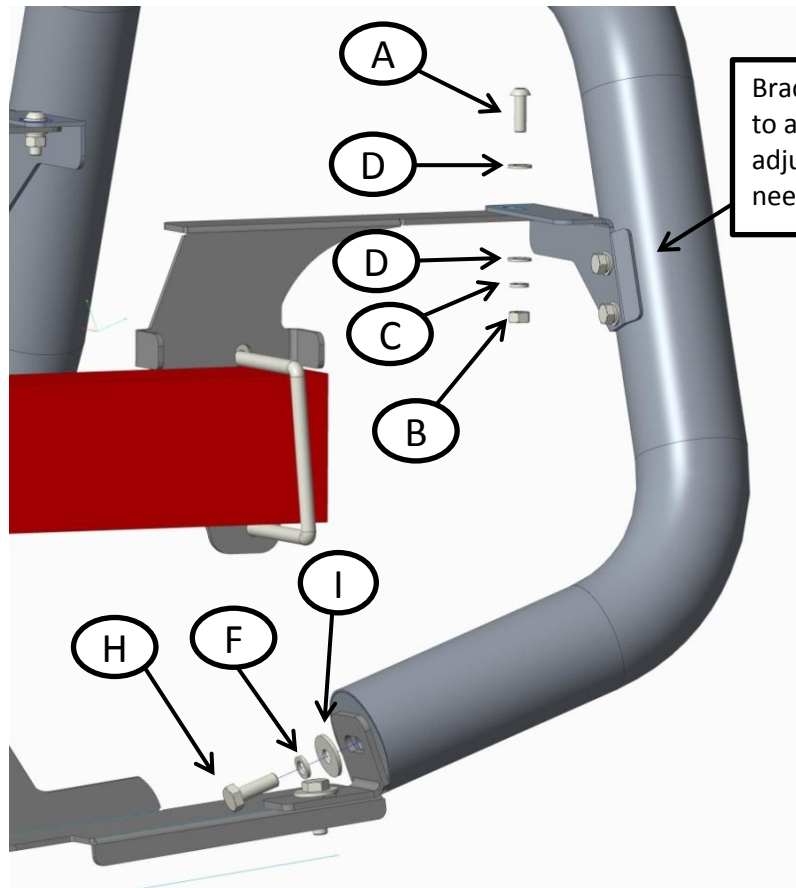

Bracket is slotted to allow for fine adjustment if needed.


7

Fit the nudge on to the protruding brackets using the kit shown in FIG 5.


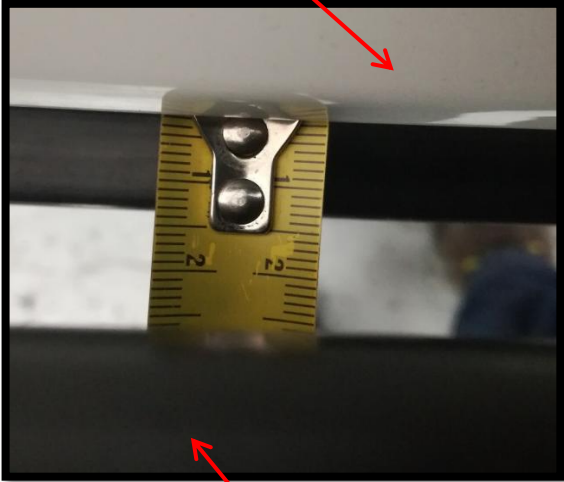
8

Make sure the nudge bar is centered and is as close to the vehicle as can be. A good way to double check is to measure from the centre of the pdc to the nudge in a horizontal line and compare the drivers and passenger side measurements. FIG 6.

FIG 6

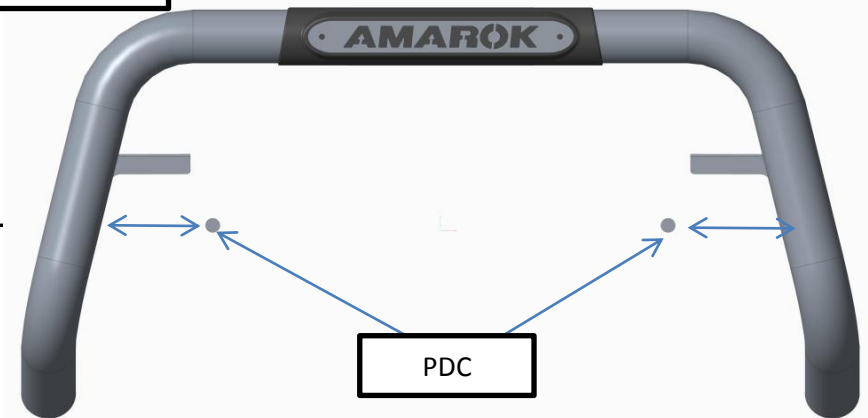

Fitment Instruction: Amarok Facelift PDC Nudge Bar

Visual / Graphic Illustration	Step #	Description/Method
<div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>Top View</p> <p>↓ ↓</p>  <p>Recommended</p> </div> <div style="text-align: center;"> <p>Vehicle Front</p>  <p>Vehicle Nudge</p> <p>Picture Taken From Top View</p> </div> </div>	<p>9</p>	<p>Place Nudge Bar at a recommended Gap of 25mm from the Vehicle.</p>

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

