

ACCESSORY FITMENT

Product

Kia Sportage Side Bars

Tracking no.

20038 /147



60
Minutes

Models :All

Page 1 of 6

Date :05/09/2016

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	8	M8x25 Sets	J	2	Rear M10 T-bolt
B	16	M8x22x1.6 Flat washers	K	2	Front M10 T-bolt
C	8	M8x30x2 Flat washers	L	4	M8 T-bolt
D	12	M8 Spring washers	M	2	Oval side step(PS and DS)
E	12	M8 Hex nuts	O	4	Spacers
F	4	M10 Hex nuts	P	2	Front mounting bracket (PS and DS)
G	4	M10x30x2 Flat washers	Q	2	Rear mounting bracket (PS and DS)
H	4	M10 Spring washers			

Additional equipment/Material needed for fitment :

Qty		Spanner set		Torque Wrench
		Ratchet Set		
		Flat head screw driver		

Precautions during fitment:

Ensure you have an adequate working space. Ensure that the correct tools and appropriate clothing are used with installation


Directions for use:

Please read all instructions Carefully Before Installation.

Fitment Instruction: Sportage Side Steps



Visual / Graphic Illustration

DRIVER SIDE STEP SHOWN

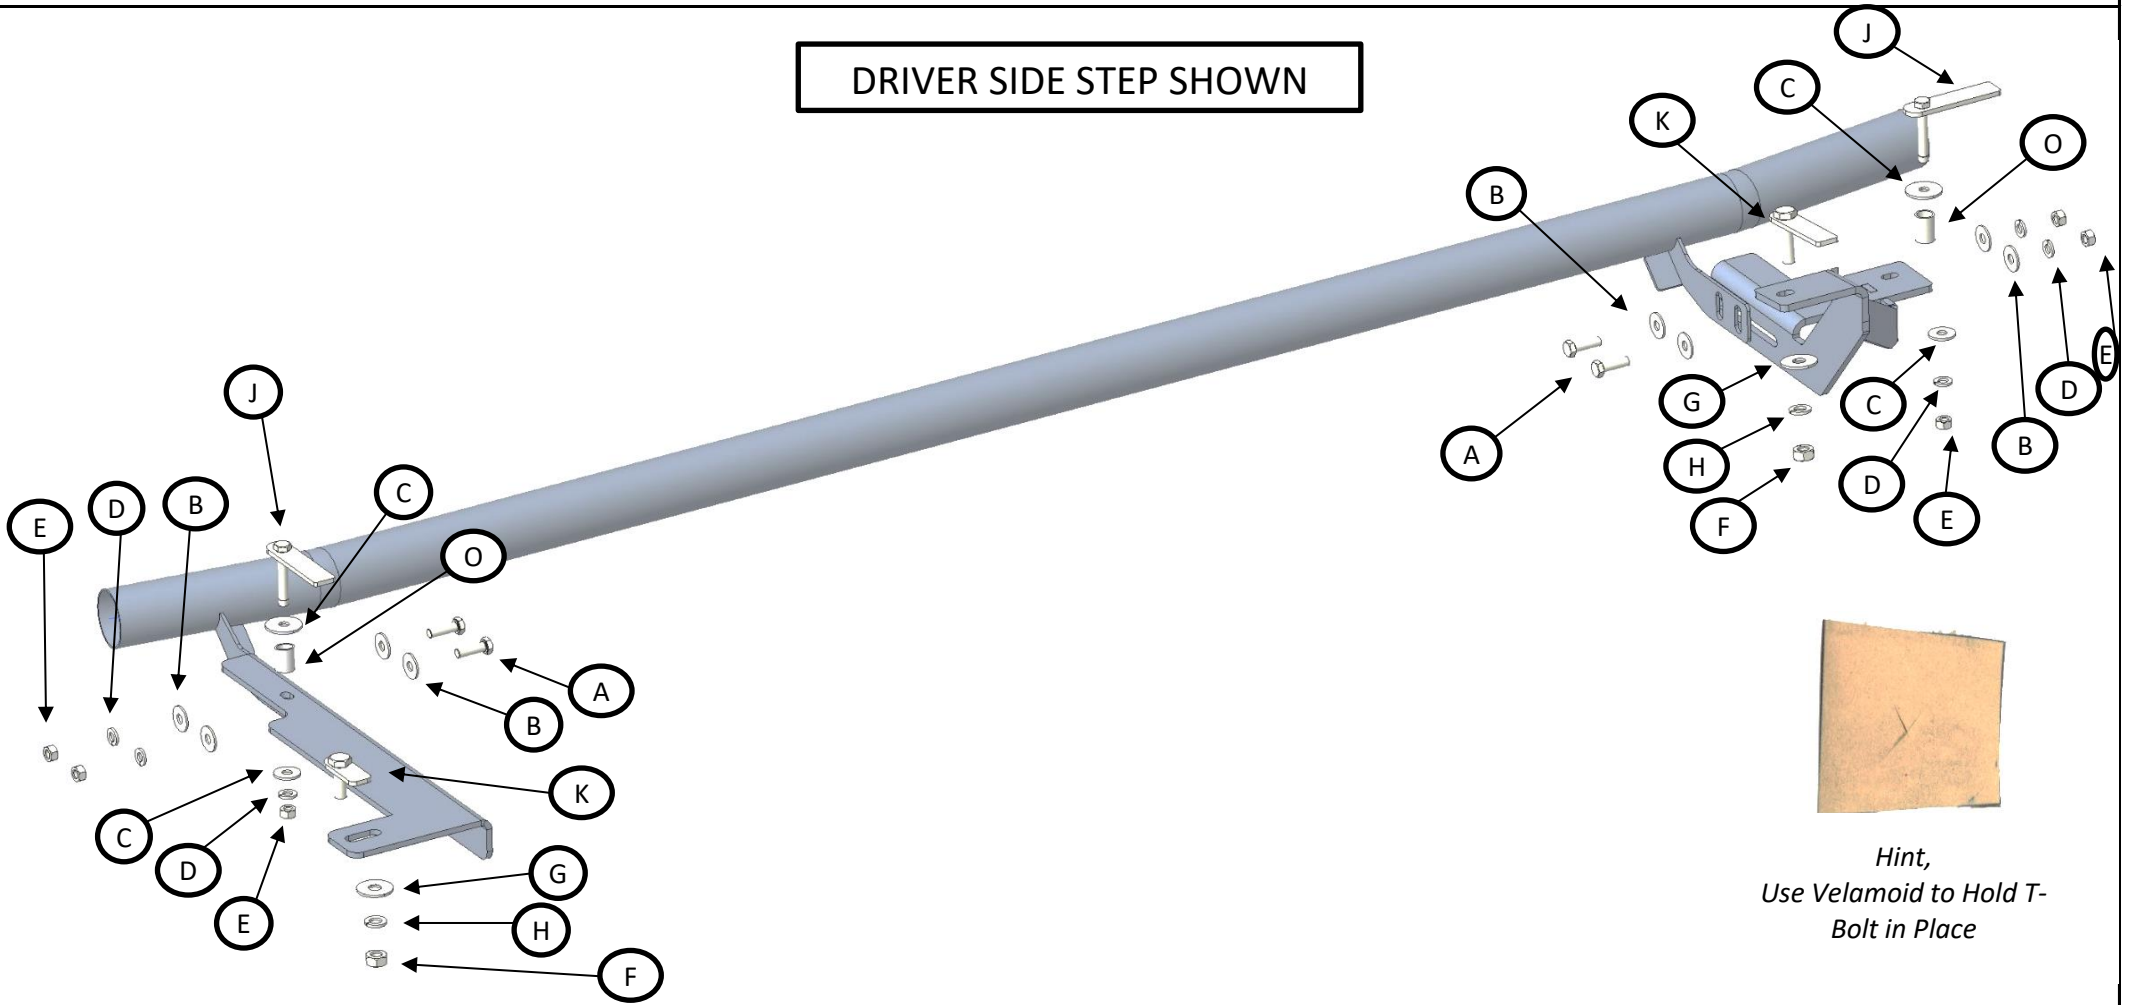

Fitment Instruction: Sportage Side Steps

Visual / Graphic Illustration

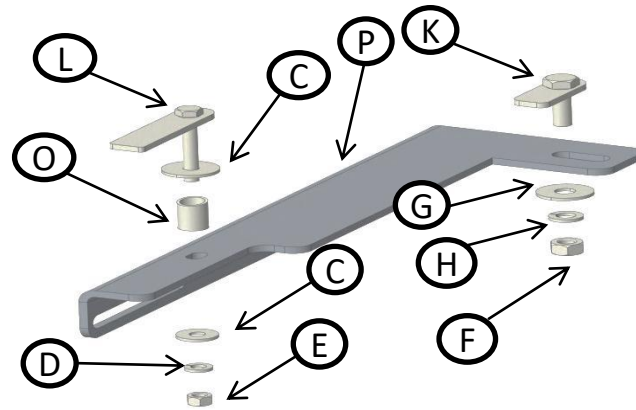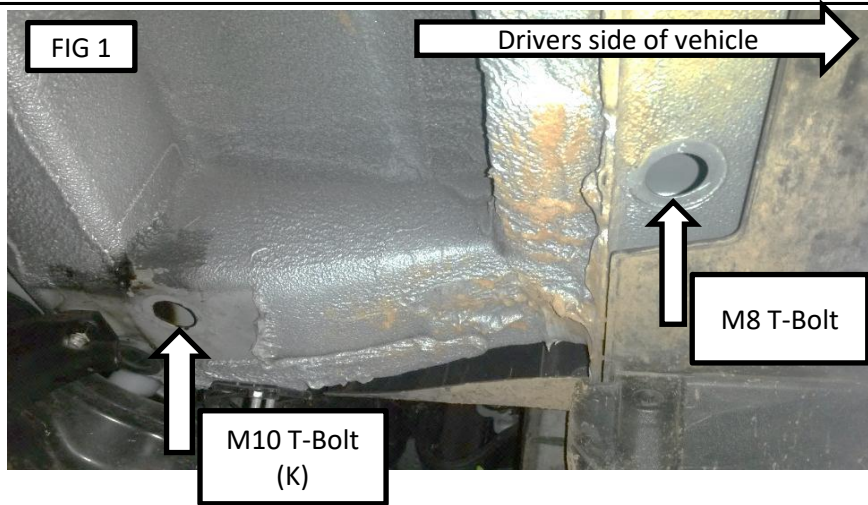

Step #

Description/Method

1

Locate the holes required for the drivers front bracket, located just behind front tyre (shown in FIG 1). Remove the grommets.

2


Using the kit shown, mount the bracket labelled DF. Do not fully tighten.

3

Do the same to the passengers side.

Fitment Instruction: Sportage Side Steps

Visual / Graphic Illustration

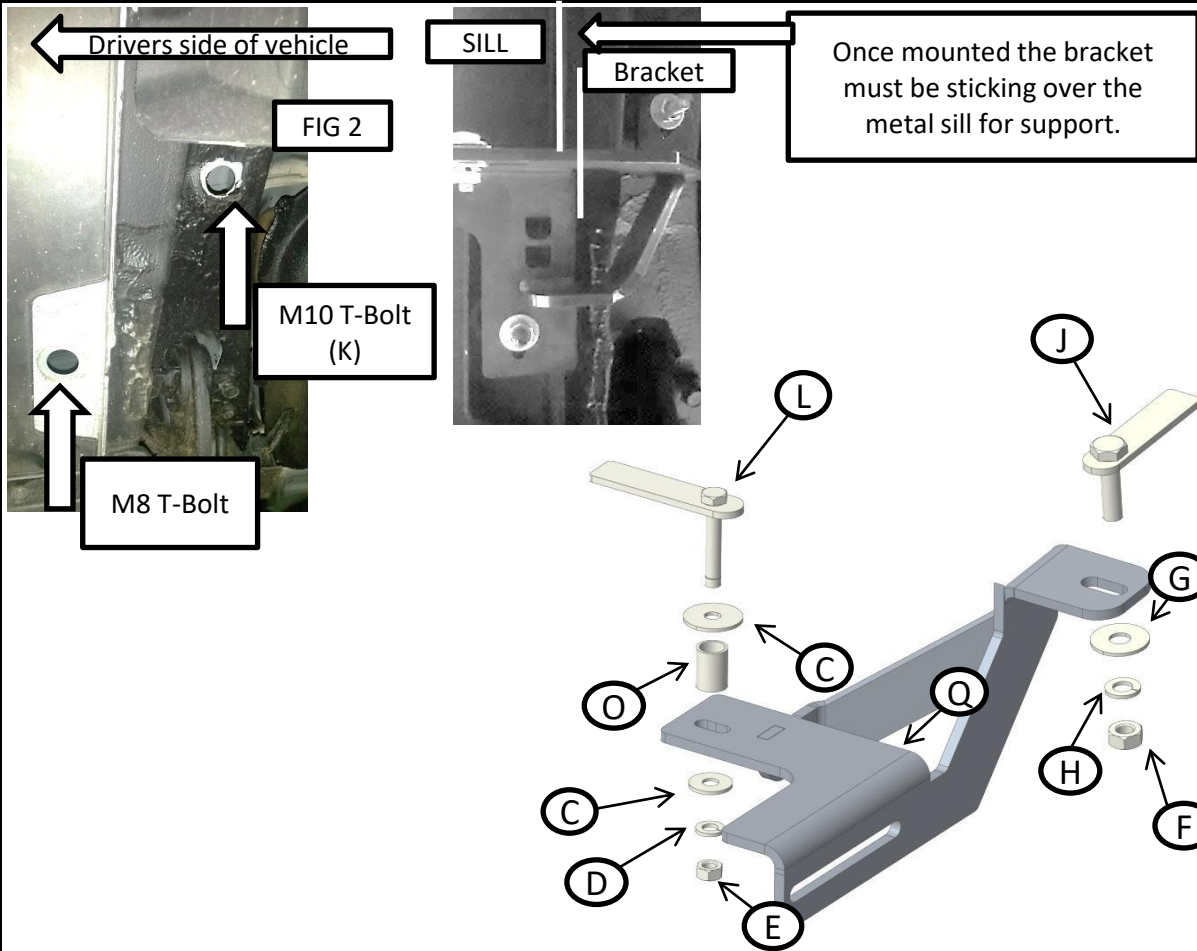

Step

Description/Method

4

Locate the holes required for the drivers back bracket, located just in front of the rear tyre. (shown in FIG 2).
Remove the grommets.



5

Using the kit shown, mount the bracket labelled DB. Do not fully tighten.

6

Do the same to the passengers side.

Fitment Instruction: Sportage Side Steps

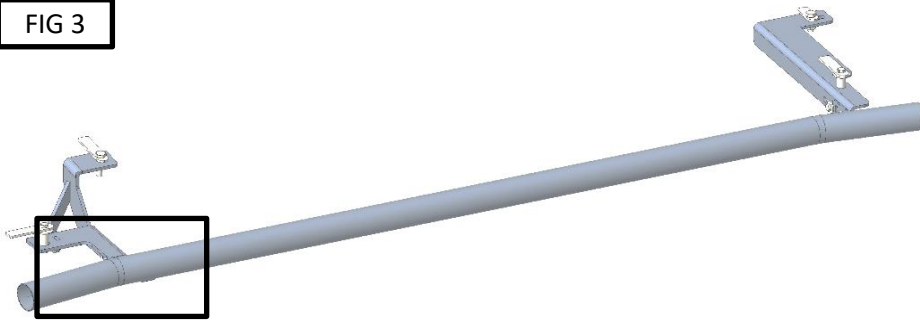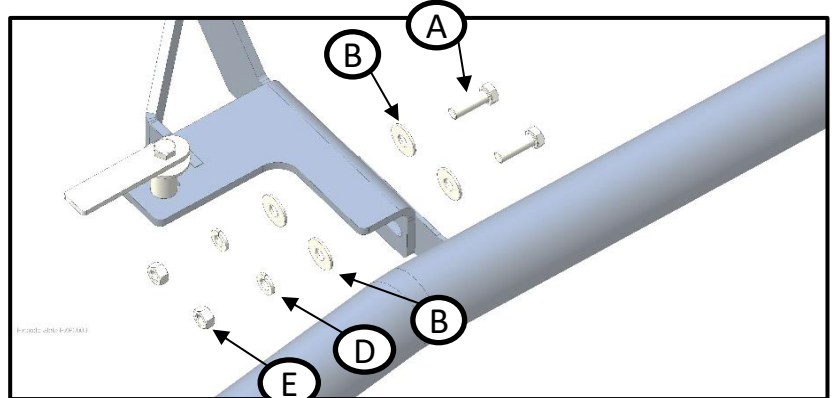Visual / Graphic Illustration	Step #	Description/Method
<div data-bbox="67 443 181 491" style="border: 1px solid black; padding: 2px;">FIG 3</div> 	7	Fit Side Bar as shown in Figure 3.
 <p data-bbox="168 1292 414 1332"><i>Driver Side Shown</i></p>	8	Do the same to the other side of the vehicle.

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

