

ACCESSORY FITMENT INSTRUCTION

Product

Mercedes Sprinter Nudge Bar

Part no.

50020T & BS-50021

(Tracking No. 367)



30
Minutes

Models : ALL

Page 1 of 3

Date : 30-Oct-2019

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	2	M12x40x1.5 Sets (fine thread)			
B	2	M12 Spring washer			
C	4	M12x40 Set			
D	12	M12x30x2 Flat Washers			
E	6	M12 Hex Nyloc nuts			
F	2	T-Bolt			
G	2	DS+PS Bottom Bracket			
H	2	Velamoid			
I	1	Nudgr Bar			

Additional equipment/Material needed for fitment :

Qty		Qty	
1	Spanner Set	1	Masking Tape
1	Socket and Ratchet Set	1	Torque Spline Set

Precautions during fitment:

Wear the appropriate PPE clothing during installation.

Do not cause any damage to the vehicle.

Directions for use:

Apply masking tape onto the vehicle to prevent scratches before installation.

Read all instructions carefully before installation.


Follow all instructions carefully.

Fitment Instruction: Mercedes Sprinter Nudge Bar

Visual / Graphic Illustration

Step #

Description/Method

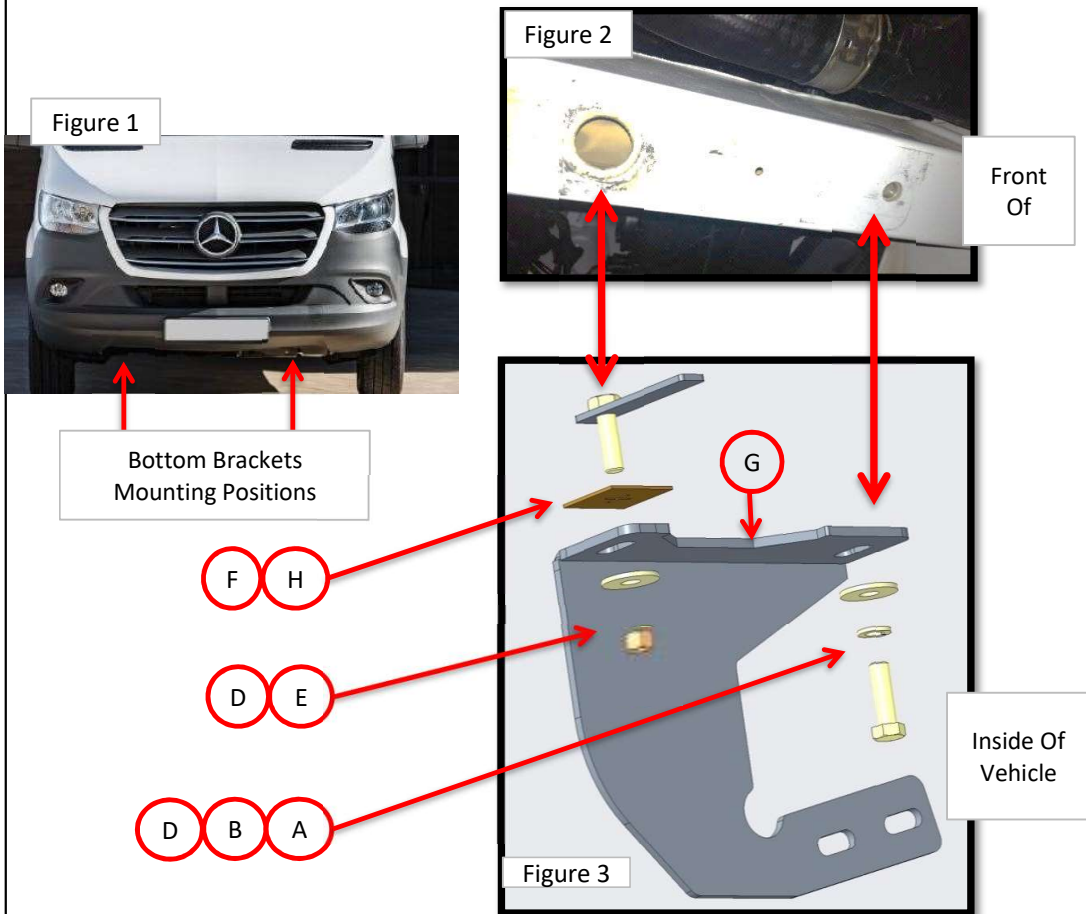

1

Locate Bottom Mount positions as shown in Figure 1 & Figure 2. (PS Shown in Figure 2)

2

Fit Bottom Mount Bracket as shown in Figure 3. (Bracket Marked "P" for PS)


3

Do the Same to other side of Vehicle.

Fitment Instruction: Mercedes Sprinter Nudge Bar

Visual / Graphic Illustration

Figure 4

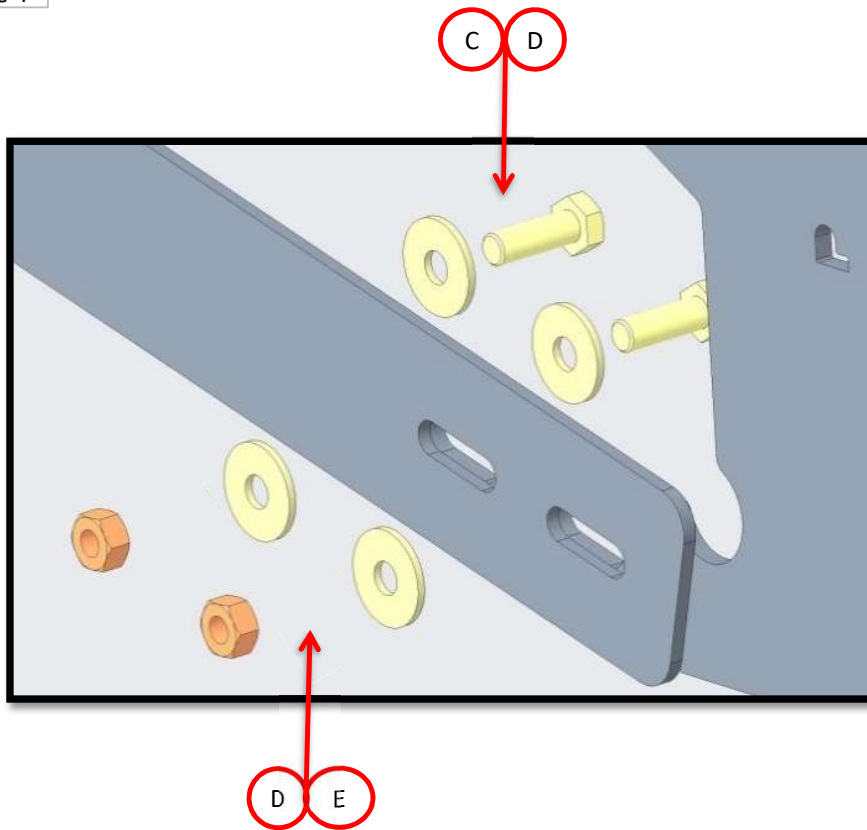

Step #

Description/Method

4

Fit Nudge Bar to brackets that was fitted in step 2 as shown in Figure 4.

5

Complete