

# ACCESSORY FITMENT INSTRUCTION

**Product**

Peugeot Landtrek 2021 Sports Bar Stainless/Black

**Part no.**



60  
Minutes

Models :

Page 1 of 5

5/10/2021

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	6	M8 x 25 Set Screws	H	4	M10 spring washers
B	8	M8 spring washers	I	4	M10 x 40 x 3 flat washers
C	10	M8 x 22 x 1.6 Flat Washers	J	2	Grommets
D	2	M8 x 90 Sets	K	2	Base plates
E	2	M8 x 25 x 1.6 Flat washers	L	4	Base rubbers
F	4	M8 Hex Nuts	M	2	Joining rubbers
G	4	M10 Hex nuts			

Additional equipment/Material needed for fitment :

Qty	Socket Set	Qty	
	Spanner Set		
	Screw Driver		
	Stanley Knife		
	Torque Wrench		

Precautions during fitment:

1. Avoid direct contact with sharp objects when removing the packaging.
2. When placing the assembled Sports Bar in place, ensure not to scratch the base plates.

Directions for use:

1. Have the bar and its assembly pieces placed on a rubber mat to avoid any damages during fitment.
2. Two people are required for this fitment.


## Fitment Instruction: Sports Bar

Visual / Graphic Illustration

Step #

Description/Method

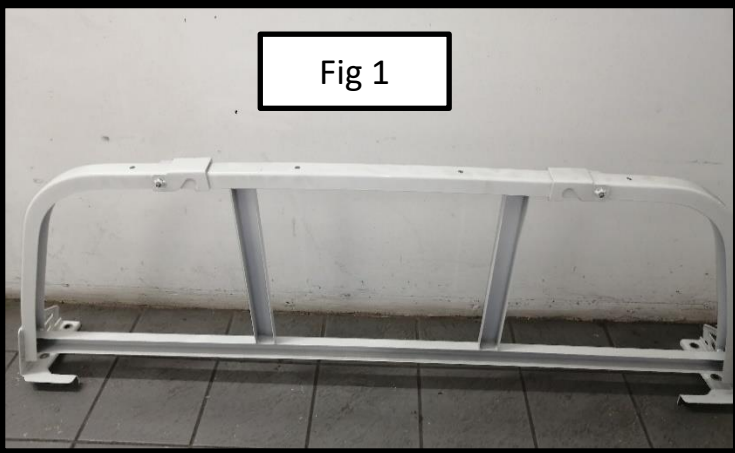
Fig 1



1

Remove Cab Guard should vehicle come with one as shown in Fig 1.

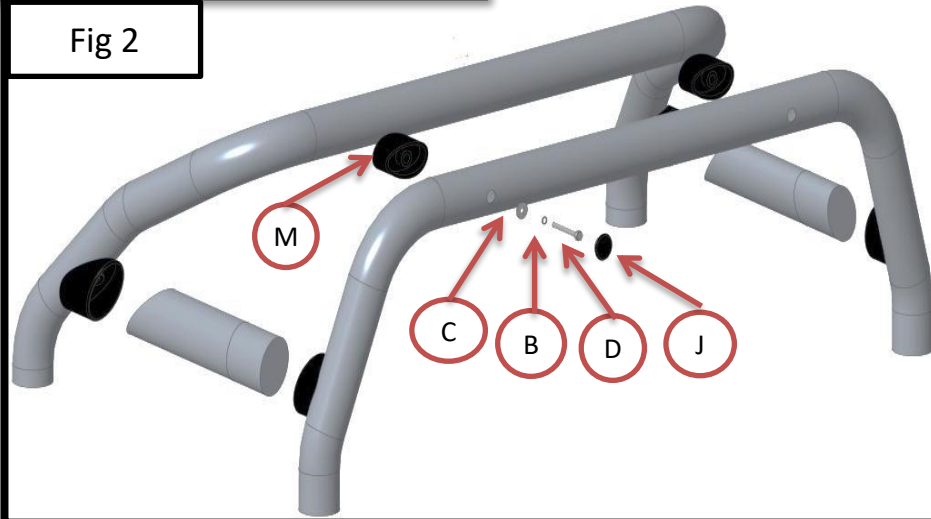Fig 2






2

Assemble the Sports Bar as shown in Fig 2.

Images used in this fitting instruction may vary from actual product.

## Fitment Instruction: Sports Bar

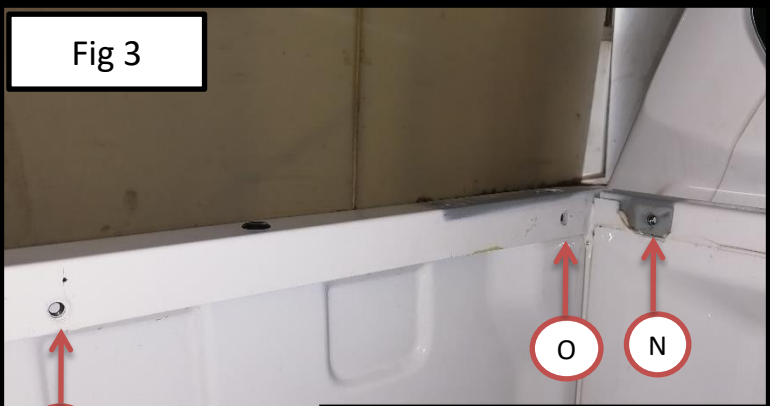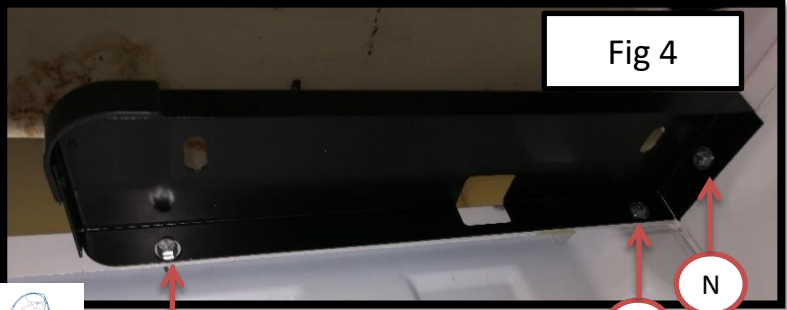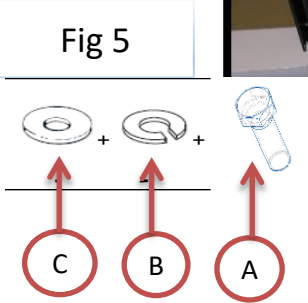Visual / Graphic Illustration	Step #	Description/Method
 <p>Fig 3</p>	3	Place the Base Plate in position by lining the existing bin holes marked N, O and P with the Base Plate holes as shown in Fig 3 and 4.
 <p>Fig 4</p>	4	Using the bolts provided, secure the Base Plate and torque the bolts. Top of Base Plate must be level with top of Bin.
 <p>Fig 5</p>	5	Repeat instructions 3 and 4 on the Driver's side.

**Fitment Instruction:**  
**Sports Bar**

Visual / Graphic Illustration



Step #

Description/Method

6

Gently place the bar into position and secure the bar using the fastners provided.

## Final step

Page 5 of 5

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.



