

ACCESSORY FITMENT INSTRUCTION

Product

CHERY TIGGO 4 NUDGE BAR

Part no.

10055T




60
Minutes

Tiggo 2022

Page 1 of 5

01-06-2022

DIAGRAM

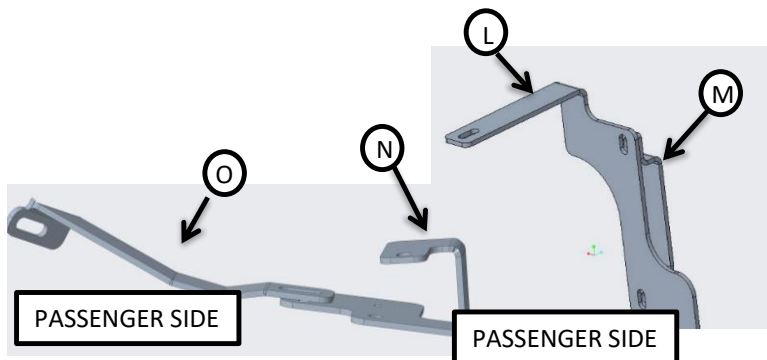

Kit content:

	Qty	Description		Qty	Description
A	4	M8 x 35 set screws	I	6	M10 x 30 x 2mm Flat Washers
B	4	M8 x 22 x 1.6mm Flat Washer	J	4	M10 spring washers
C	4	M8 Spring Washers	K	2	M10 T bolts
D	4	M8 x 25 set screws	L	2	Top Brackets LH & RH
E	4	M8 Black spring washers	M	2	Clamp brackets
F	4	M8 Black Flat Washers	N	2	Bottom Brackets LH & RH
G	2	M10 x 30 sets	O	2	Bottom Join Brackets LH & RH
H	4	M10 Hex Nuts	P		

Additional equipment/Material needed for fitment :

Qty			Qty	
		socket set		
		Spanner set		
		screwdriver set		
		masking tape		


Precautions during fitment:

Be extra careful when removing bumper from vehicle .

Fitment Instruction:

Tiggo 4 Nudge bar

Visual / Graphic Illustration

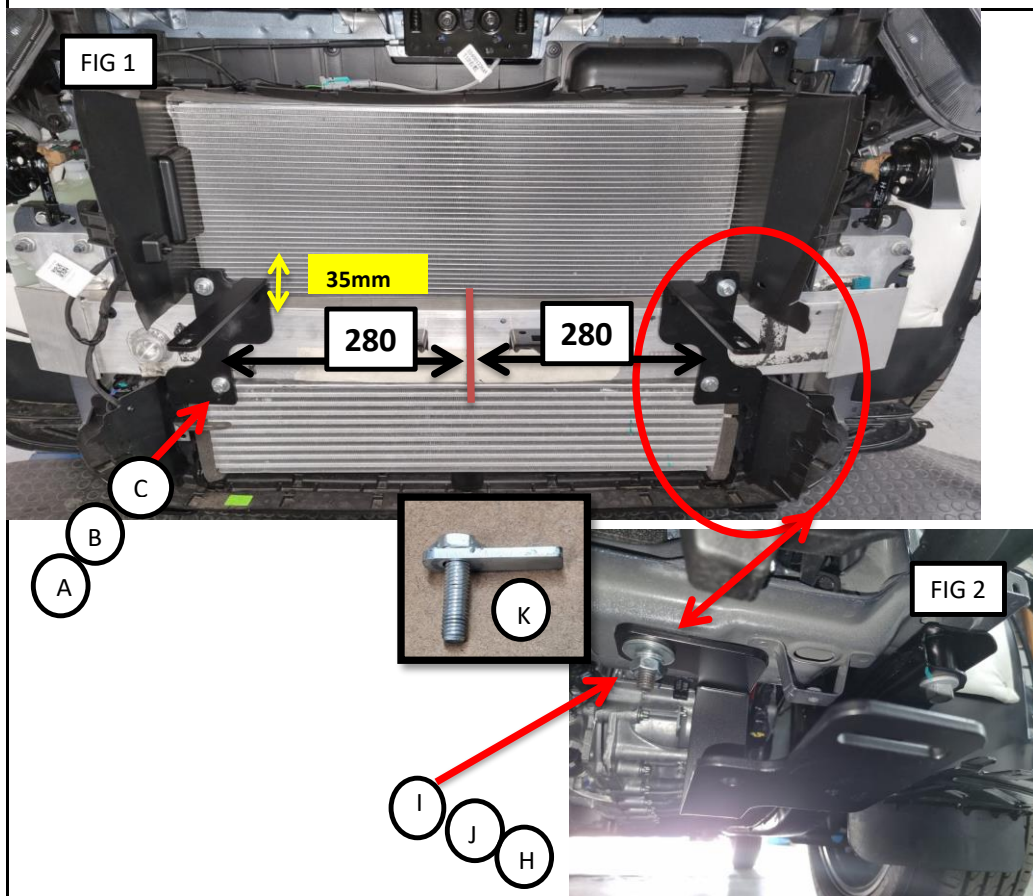

Step

Description/Method

1

Remove Front bumper

2

Find the centre of the crash beam and mark , then measure 280mm and mount the top brackets as shown in FIG 1. Adjust the bracket so that the distance from top of bracket to top of crash beam is 50mm as shown in Fig 1

3

Now fit the bottom brackets as shown in Fig2. Drivers side shown , do the same on opposite side. Brackets are marked D for driver side and P for passenger side.


4

Once the brackets are on then place the nudge bar on the brackets and check that it is center and level.

Fitment Instruction:

Tiggo 4 Nudge bar

Visual / Graphic Illustration

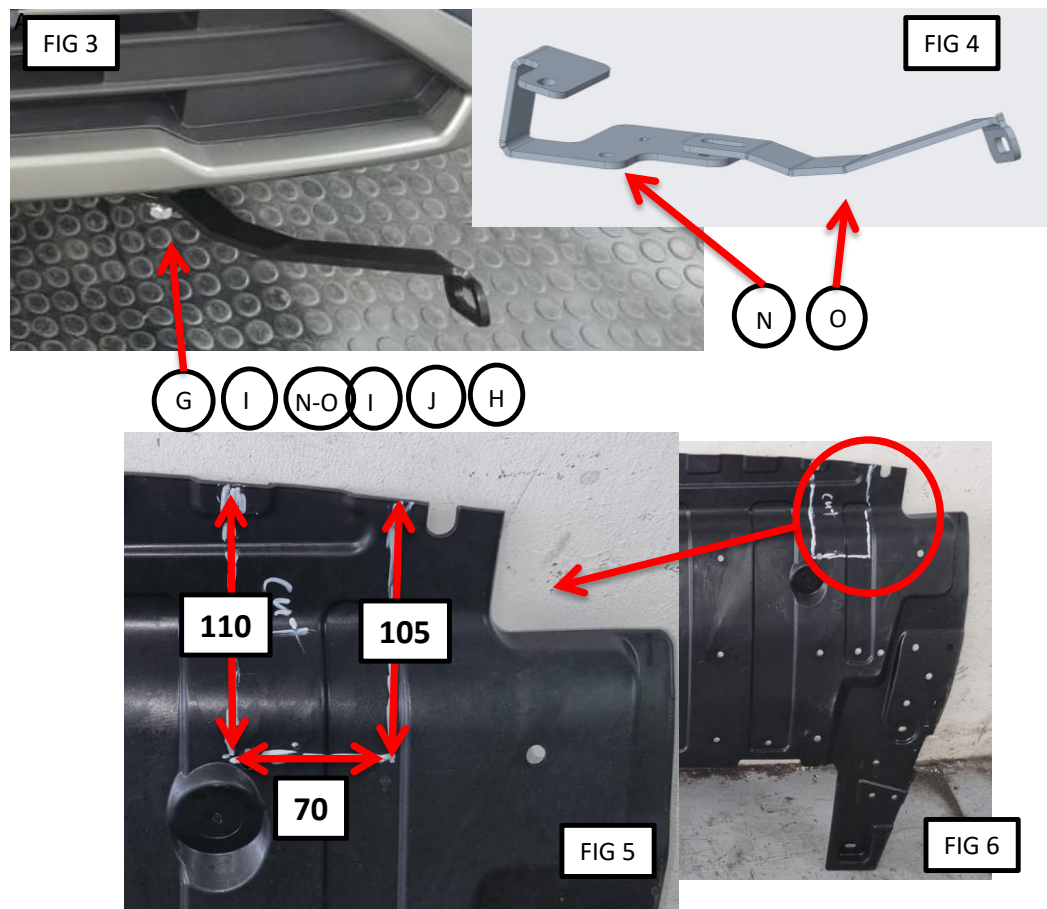

Step

Description/Method

5

Using FIG 4 as an illustration, loosely mount the bottom bracket to the intermediate bracket as shown in FIG 3. Do the same on the Drivers side

6

Mark and trim the dustcover as shown in FIG 5 and 6. Repeat process on Driver side.

Fitment Instruction:

Tiggo 4 Nudge bar

Visual / Graphic Illustration



M8 Nickel black hardware and then use the M8 black plastic caps.

Step

Description/Method

7

Now replace the bumper carefully over the brackets being careful to not scratch the bumper Grill , the top brackets will protrude through the top grill. This requires minimum 2 people to fit bumper back.

8

Once the Bumper is replaced you can fit the Nudge bar onto the brackets , centralise and tighten using the M Nickel Black hardware on the top and bottom brackets. Finish it off with the M8 black plastic caps, Fig 8

Make sure bar is centralised and tighten all fasteners to specified torque.

M8= 22Nm , M10= 42Nm , M6= 9Nm.

