

# ACCESSORY FITMENT

**Product**

Foton Tunland G7 nudge

**Part no.**

13500-DFS



60  
Minutes

Models : 2024

Page 1 of 5

Date : 25-July-2024

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	2	M12 x 45 SETS	L	4	M8 x 22 x 1.6 F/WASHERS
B	2	M12 x 30 x 2 F/WASHER	M	4	M8 SPRING WASHERS
C	2	M12 x 40 x 3 F/WASHER	N	2	M8 PLASTICS CAPS
D	2	M12 SPRING WASHER			
E	2	M12 HEX NUTS			
F	2	M10 x 30 SETS			
G	2	M10 x 90 SETS			
H	6	M10 x 30 x 2 F/WASHERS			
I	4	M10 SPRING WASHERS			
J	2	M10 HEX NUTS			
K	4	M8 x 30 SETS			

Qty		Qty	
	RATCHET & SOCKET SET		HACK SAW
	MASKING TAPE		

Precautions during fitment:

Do not cause any damage to the vehicle. Apply masking Tape to the front bumper prevent any scratches. Requires 2 people to fit. Ensure that you are wearing the appropriate PPE during Fitment.

Directions for use:

Read all instructions carefully before installation

## Fitment Instruction: Foton Nudge bar

Visual / Graphic Illustration


Step #

Description/Method



1

Take note of the position in the grill for the two top brackets. Secondly note that the passenger side and drivers side brackets are not exactly the same. Select the correct bracket as shown in the images and then loosley mount it to the slam track using the M8 set, spring washer and washer.



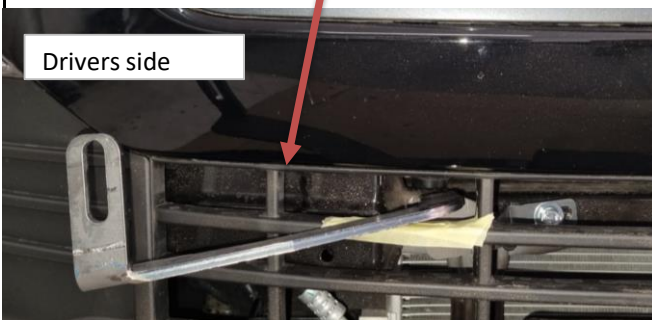


## Fitment Instruction: Foton Nudge bar

Visual / Graphic Illustration

Step #

Description/Method

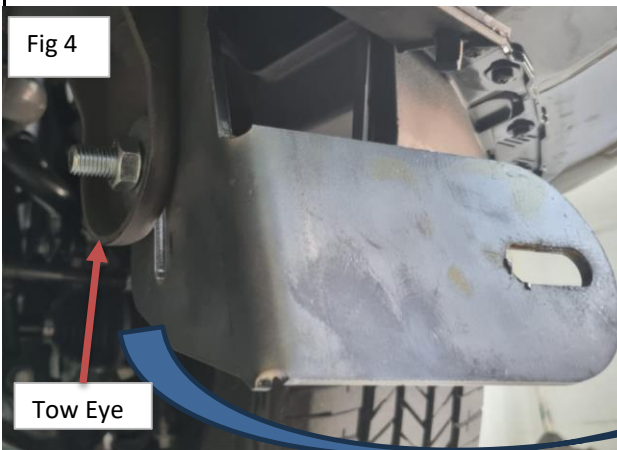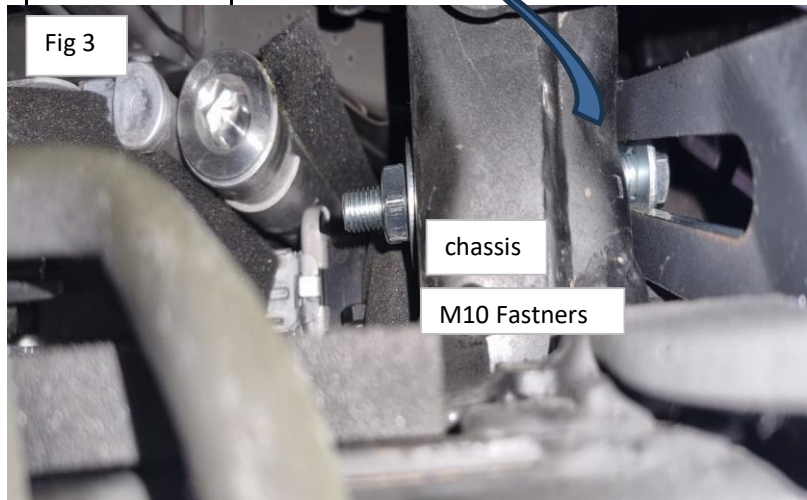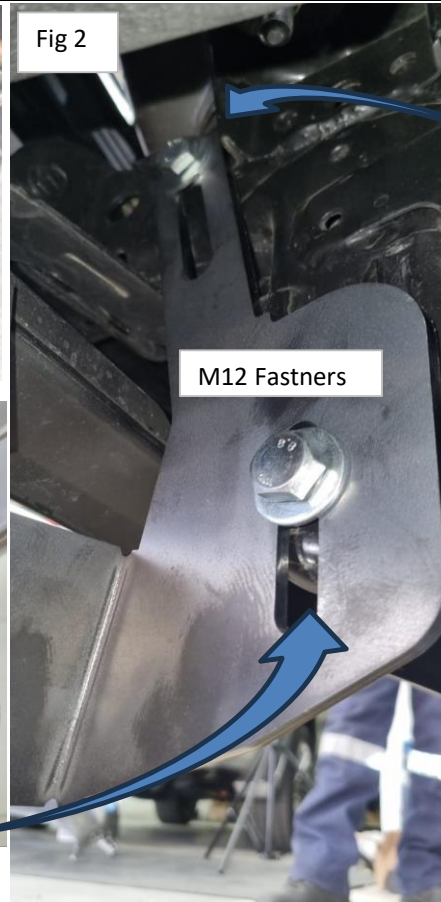

2

Loosley bolt the bottom bracket to the side of the chassis as shown. Top of the bracket will be mounted to the crumple zone shown in Fig 3 and the bottom of the bar will be mounted to the toweye as seen if Fig 4.

**Fitment Instruction:**  
Foton Nudge bar

Visual / Graphic Illustration

Step #

Description/Method



3

Loosley bolt the nudge bar to the 4 protruding brackets using the M8 fastners provided.



Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

