

# ACCESSORY FITMENT

**Product**

JAC T9 Bash plate

**Part no.**

BS-40014 TN: 588




60  
Minutes

Models :DC

Page 1 of 6

Date :13/11/2024

## DIAGRAM

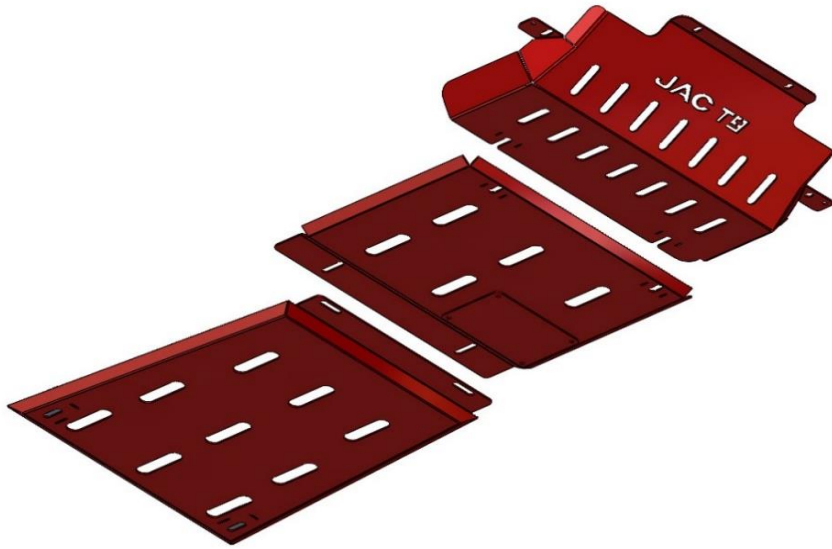

## Kit content:

| Qty | Description              | Qty | Description |
|-----|--------------------------|-----|-------------|
| 4   | M8 x 110 set screws      | 8   | M8 Hex Nuts |
| 8   | M8 x 25 set screws       |     |             |
| 8   | M8 x 30 x 2 Flat washers |     |             |
| 14  | M8 x 25 x 2 Flat Washers |     |             |
| 14  | M8 Spring washers        |     |             |

## Additional equipment/Material needed for fitment :

| Qty | Description | Qty | Description |
|-----|-------------|-----|-------------|
|     | 13 spanners |     |             |
|     | 13 sockets  |     |             |
|     | ratchet     |     |             |
|     |             |     |             |
|     |             |     |             |

## Precautions during fitment:

Ensure you don't damage the vehicle during installation. Ensure that the correct tools and appropriate clothing are used with installation.


**Fitment Instruction:**

## Visual / Graphic Illustration

## Step #

## Description/Method

Fig 1

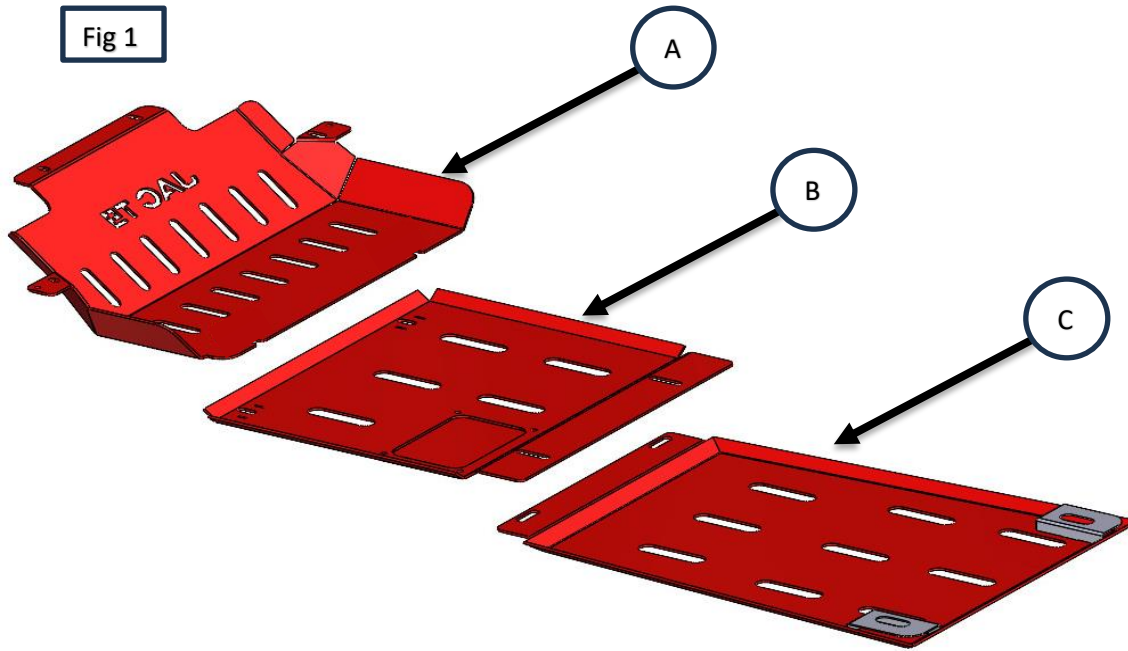**1**

Remove the 2 standard dust cover plates from the vehicle, front and middle. These can be discarded.

**2**

Fig 1 shows the assembly layout of how the plates will fit.

**3**

You will need to start with the plate marked A then you will next add the plate marked B which overlaps on plate A and lastly you will add the plate marked C which overlaps on plate B.

**4**

**Ensure that you loosely fit all the plates first before you begin to tighten them.**


## Fitment Instruction: JAC T9 Bash Plate

Visual / Graphic Illustration

Step #

Description/Method

Fig 2

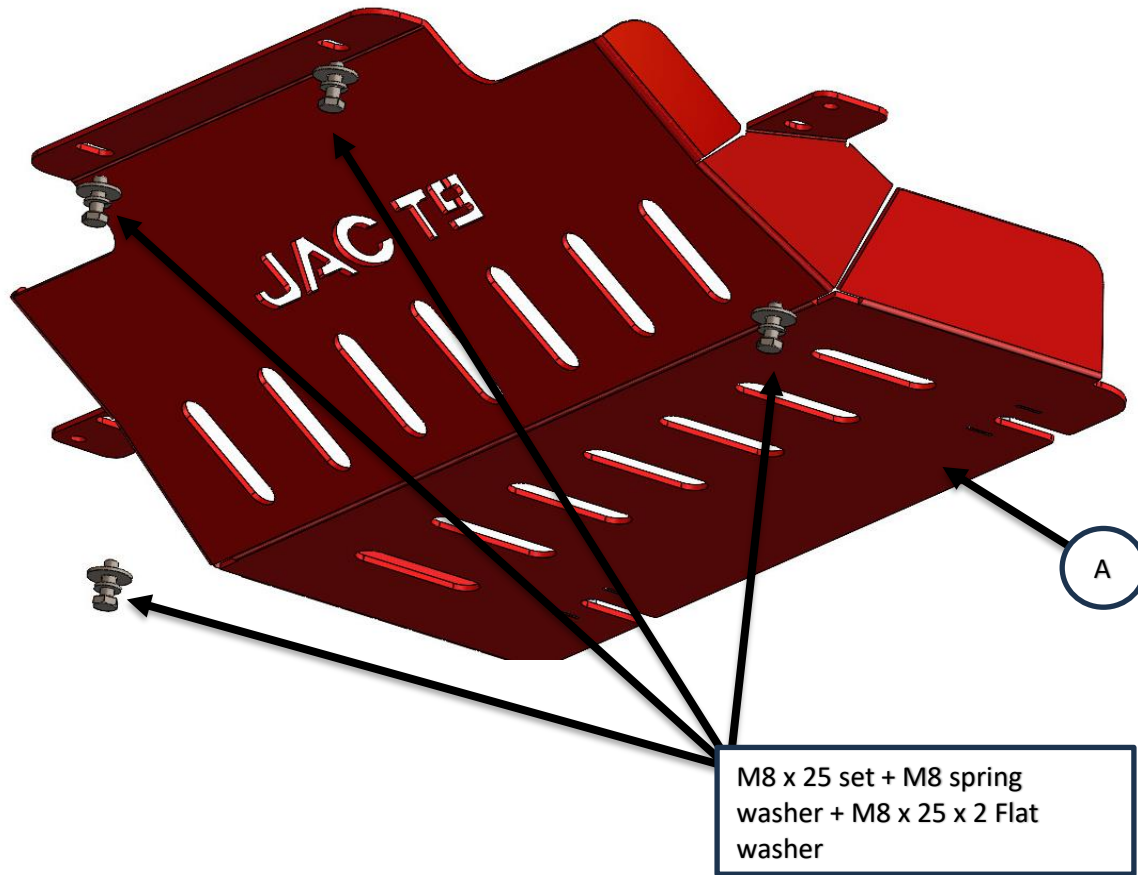

**5**

Line up the First plate(A) to the mounting points of the original dust cover plate and using the M8 fastners listed in Fig 2 loosely mount the plate.


## Fitment Instruction: JAC T9 Bash Plate

Visual / Graphic Illustration

Step #

Description/Method

Fig 3

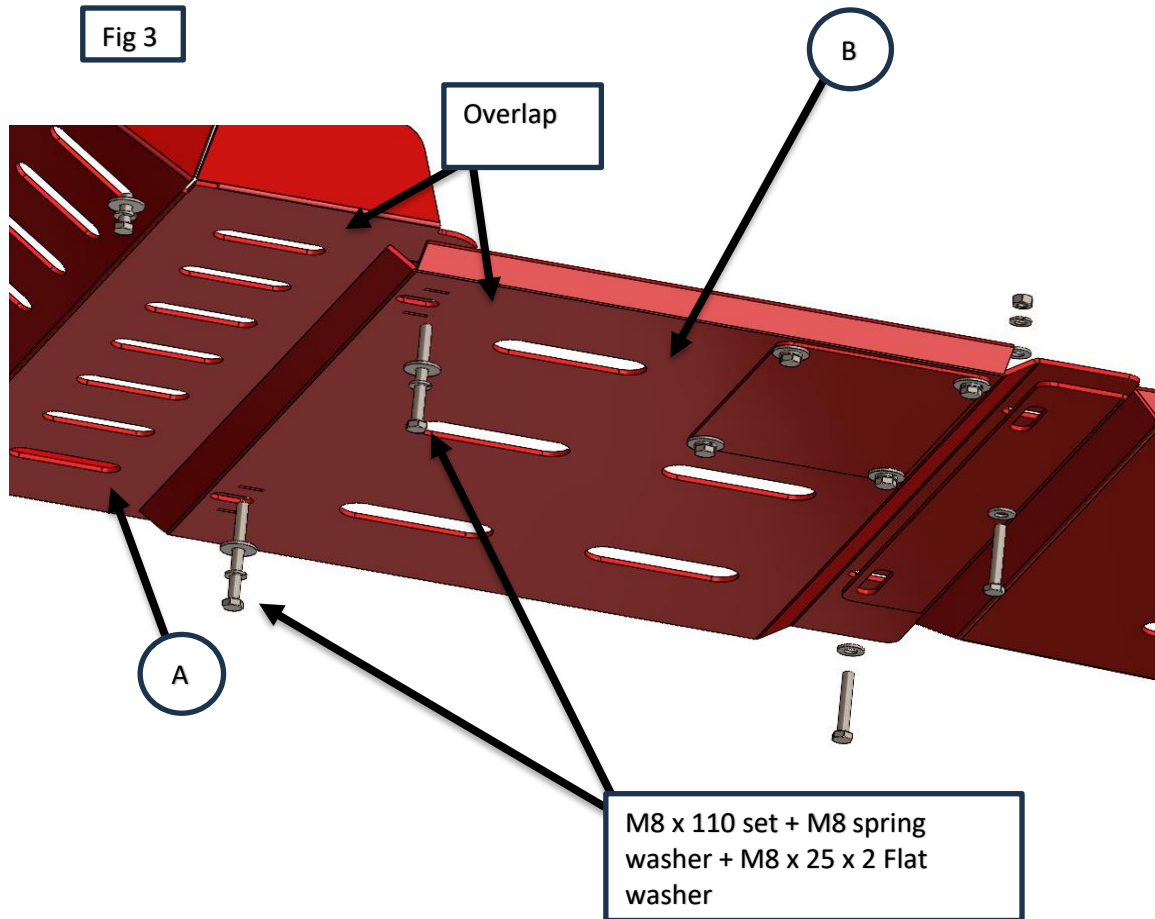

**6**

Overlap and line up the Second plate(B) to the First plate(A) and using the M8 fastners listed in Fig 3 loosely mount the front of the plate. Do not mount the back holes until you have the Third Plate (C) in place.


M8 x 110 set + M8 spring washer + M8 x 25 x 2 Flat washer

## Fitment Instruction: JAC T9 Bash Plate

Visual / Graphic Illustration

Step #

Description/Method

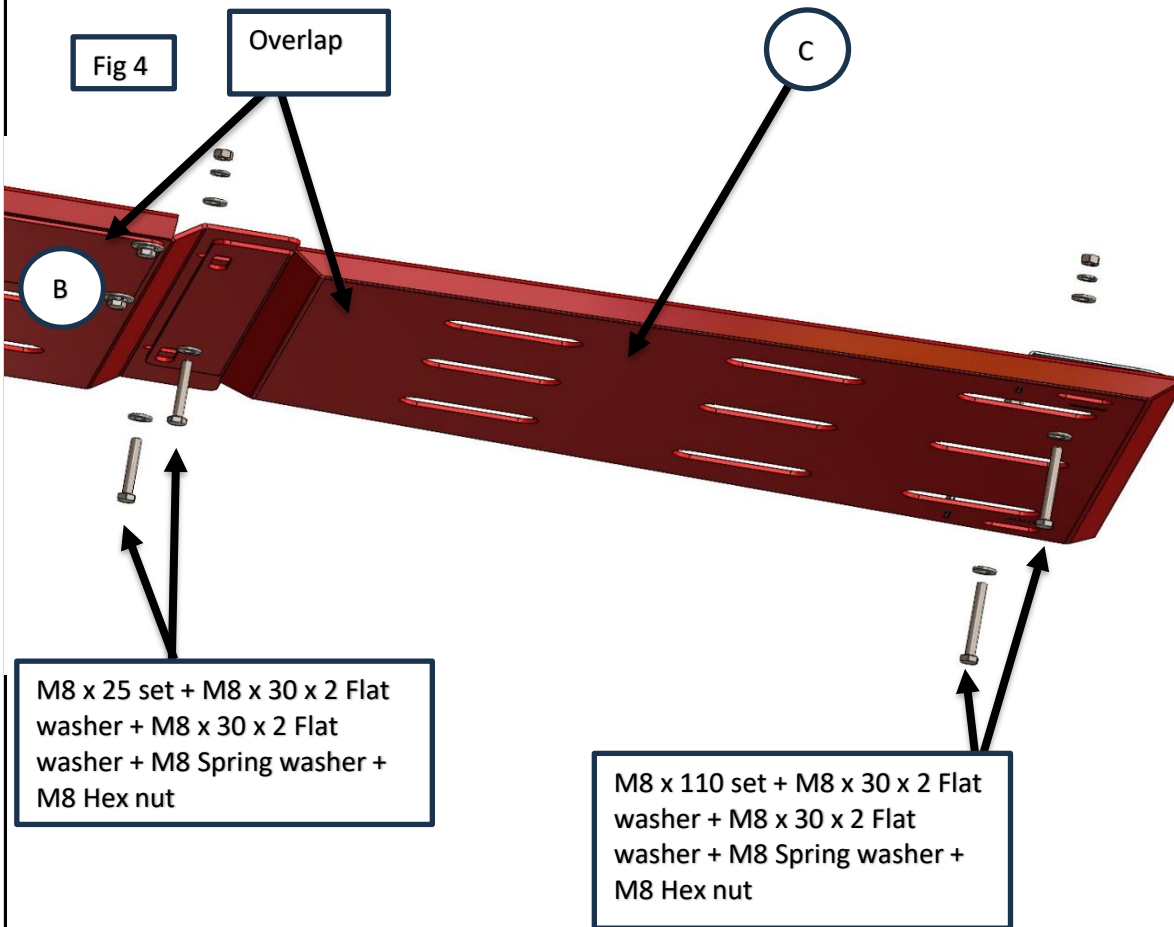

**7**

Overlap and line up the Third plate(C) to the Second plate(B) and using the M8 fastners listed in Fig 4 loosely mount the Third plate(B).

M8 x 25 set + M8 x 30 x 2 Flat washer + M8 x 30 x 2 Flat washer + M8 Spring washer + M8 Hex nut

M8 x 110 set + M8 x 30 x 2 Flat washer + M8 x 30 x 2 Flat washer + M8 Spring washer + M8 Hex nut

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

