

ACCESSORY FITMENT

Product

Foton Truckmate Rear Step

Part no.

BS-135013 TN: 631



60
Minutes

Models : Box Body and Drop side

Page 1 of 3

29/10/2025

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	4	M10 x 30 x 3 flat washers			
B	4	M10 Spring washers			
C	4	M10 x 40 sets			

Additional equipment/Material needed for fitment :

Qty		Qty	
	Fitters tool box		

Precautions during fitment:

If fitting a vehicle with dropsides - please note that if the tail gate drops all the way it will damage the vehicle.

Directions for use:

Read Carefully



Fitment Instruction: Foton Truckmate Rear Step

Visual / Graphic Illustration

Step #


Description/Method

FIG 1

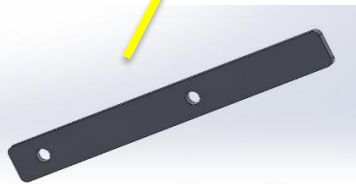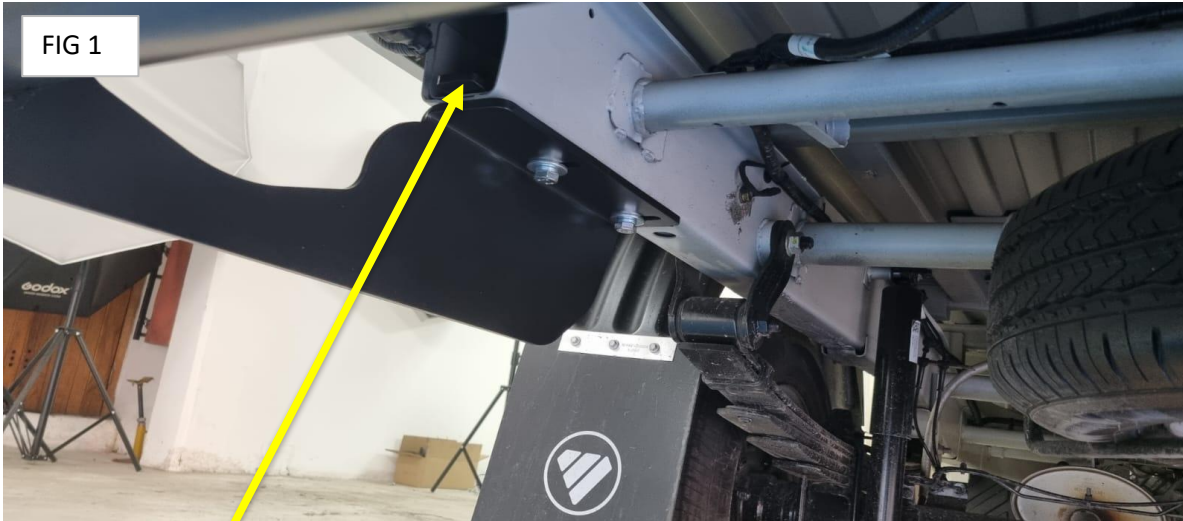

Insert the spreader plate into the chassis and mount the bar using the M10 fasteners. Take note of the hole positions. Front holes are for the Box Body and the rear are for the Drop side as shown in Fig 2

FIG 2

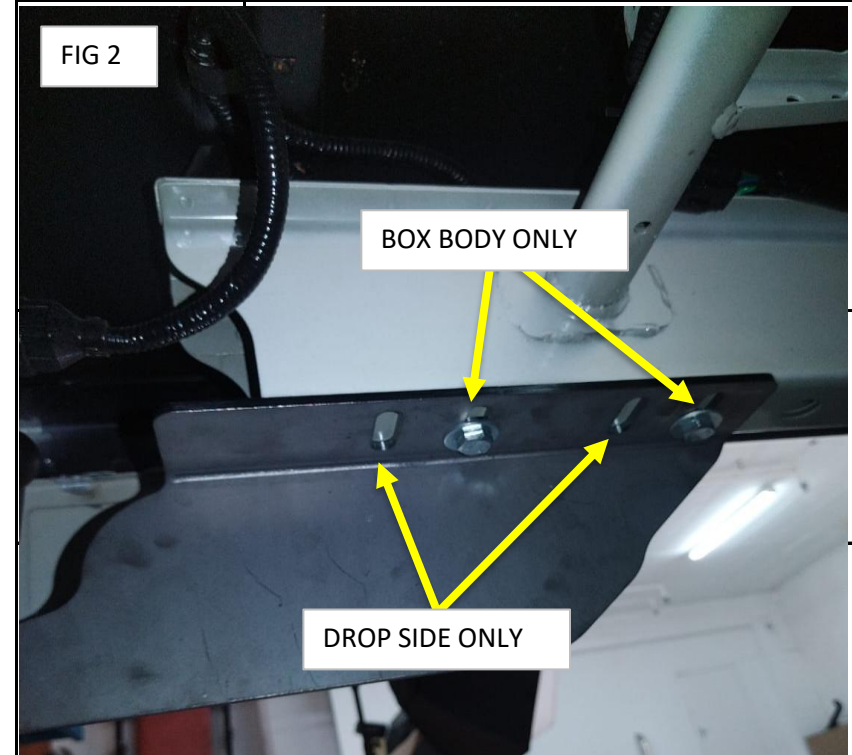

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

