ACCESSORY FITMENT

Product	Isuzu MU-X 2025	
Part no.	(1600073T)(BS-1600073) (Tracking No.: 649)	
60 Minutes	Models : 2025	
	Page 1 of 7	
	Date : 29-10-2025	

DIAGRAM







Kit content:

	Qty	Description		Qty	Description
A	2	M10 U- bolts	L	2	M10 black hex caps
B	4	M10 x 30 set screws	M	2	1 x PS & 1 x DS bottom main bracket
C	4	M10 x 40 set screws	N	2	1 x PS & 1 x DS join brackets
D	10	M10 Hex nuts	O	2	1 x PS & 1 x DS drop down brackets
E	18	M10 x 30 x 2 flat washers	P	1	Nudge bar
F	12	M10 spring washers	Q		
G	8	M8 x 25 set screws	R		
H	12	M8 x 22 x 1.6 flat washers			
I	8	M8 spring washers			
J	4	M8 hex nuts			
K	4	M8 black hex caps			

Qty			Qty	
		RATCHET & SOCKET SET		HACK SAW
		MASKING TAPE		

Precautions during fitment:

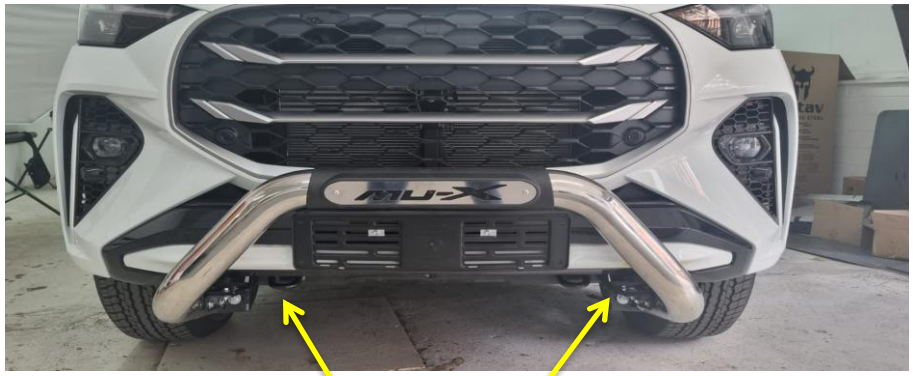
Do not cause any damage to the vehicle. Apply masking Tape to the front bumper prevent any scratches. Requries 2 people to fit. Ensure that you are wearing the appropriate PPE during Fitment.

Directions for use:

Read all instructions carefully before installation

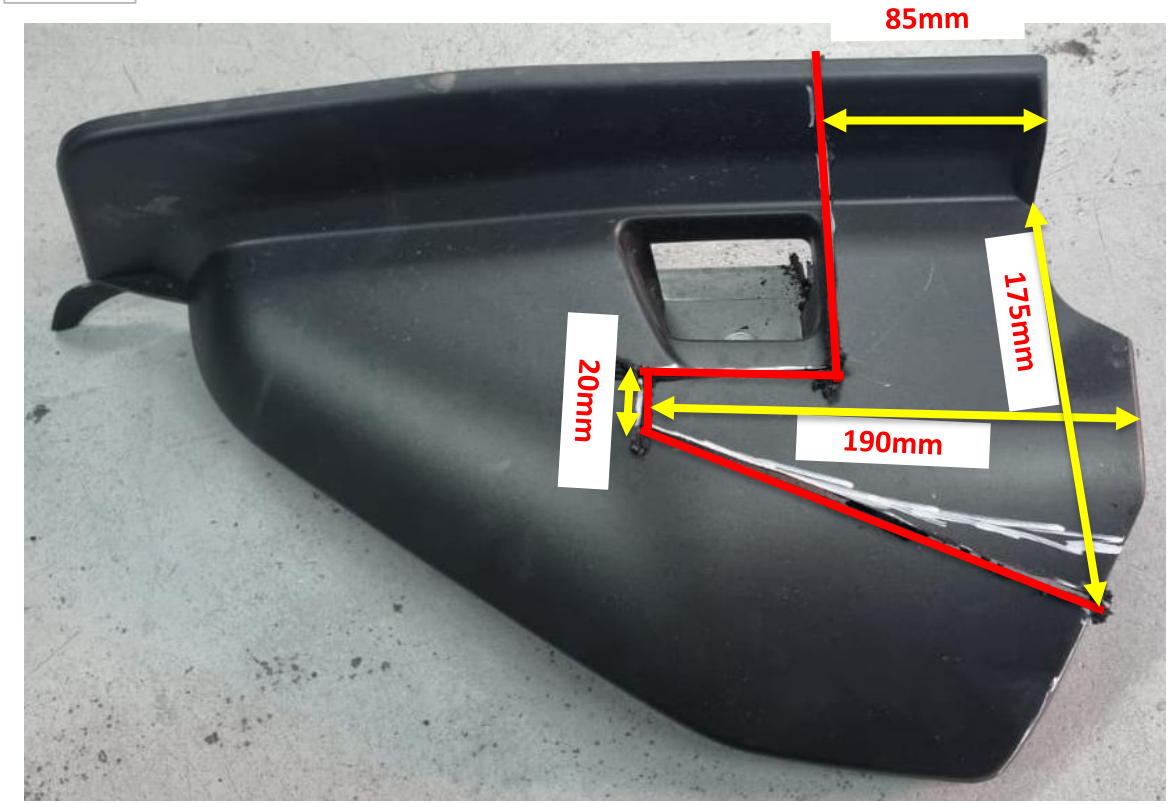
Fitment Instruction:

MU-X Nudge bar

Visual / Graphic Illustration	Step #	Description/Method
Fig. 1  Fig. 2  Driver side	1	Remove Front Plastic Under cover as shown in Figure 1, Figure 2.

Fitment Instruction:

MU-X Nudge bar

Visual / Graphic Illustration	Step #	Description/Method
Fig. 4 	2	Locate Driver Side Front Mud Cover as shown in Figure 4
	3	Trim Front covers as shown in Figure 4
	4	Do the same to the Pasessenger side

Fitment Instruction:

MU-X Nudge bar

Visual / Graphic Illustration

Fig. 6

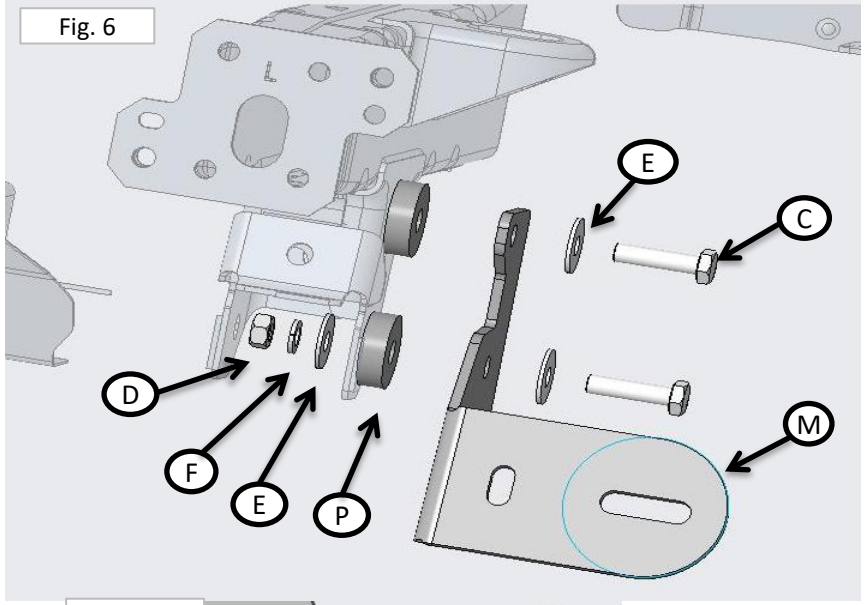
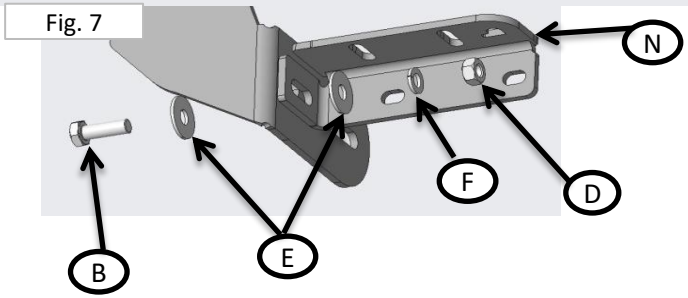


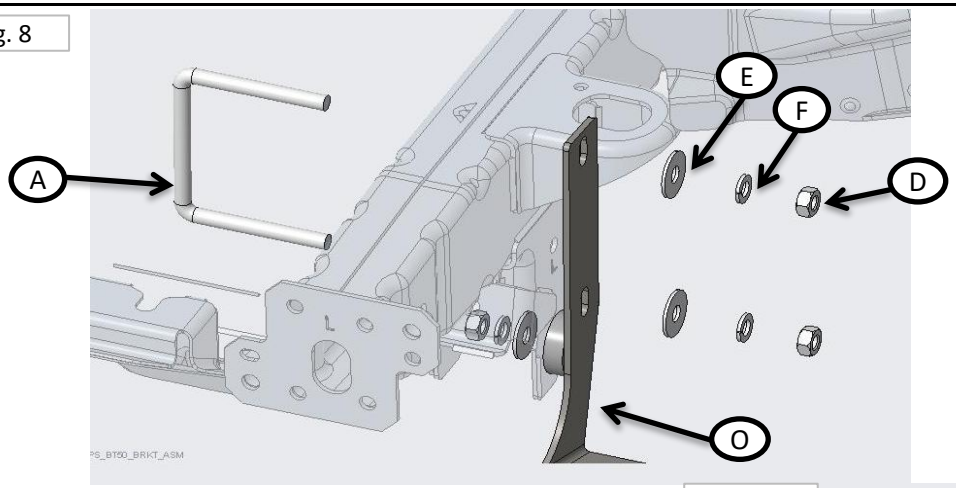
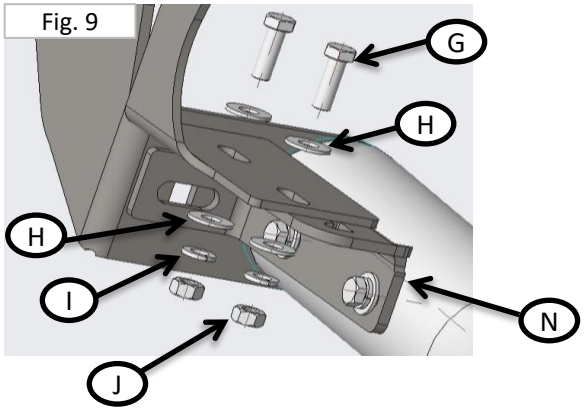
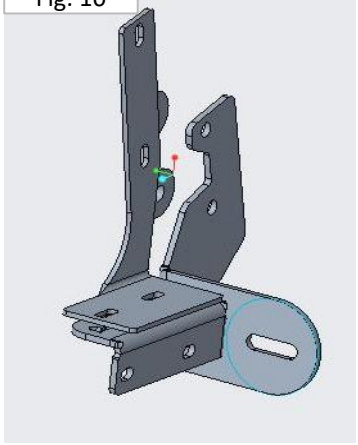
Fig. 7



Step #	Description/Method
5	Locate PS Mounting Position on Chassis as shown in Figure 6
6	Fit PS Brackets with markings "P" as shown in Figure 6, Figure 7. Do not fully tighten yet.

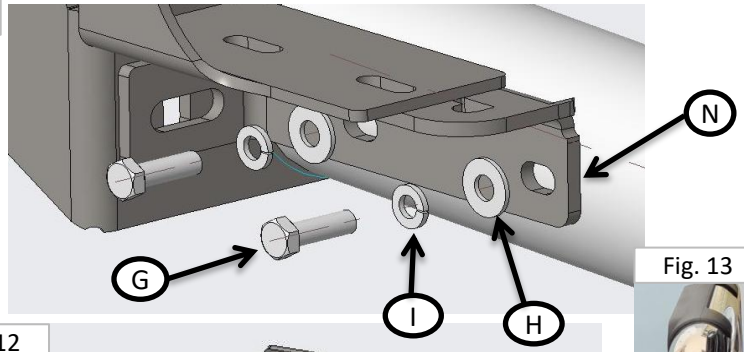
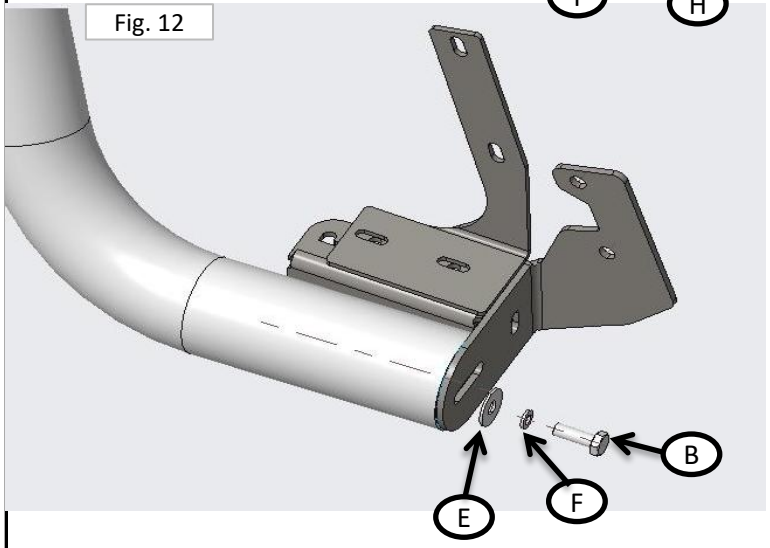
Fitment Instruction:

MU-X Nudge bar

Visual / Graphic Illustration	Step #	Description/Method
Fig. 8 		
	7	Fit bracket "O" using the U bolt to the chassis s shown in Fig 8 and attach the bottom to Bracket N Using the M8 hardware as shown in Figure 9.
Fig. 9 	8	Figure 10 shows bracket assembly
Fig. 10 		Now mount the Drivers side following the same process as above

Fitment Instruction:

MU-X Nudge bar

Visual / Graphic Illustration	Step #	Description/Method
Fig. 11  Fig. 12  Fig. 13 		Once you have both side brackets mounted proceed to step 9 below
	9	Place Nudge bar to brackets and assemble as shown in Figure 11 & 12.
	11	Ensure Nudge is centre and lift Nudge bar so there is a 10-12mm gap (Figure 13) between bar and bumber then fully tighten.

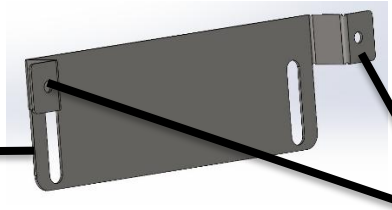
Final step

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.





Use the number plate bracket to adjust view lower. Only for High



Mount flat side to

Mount number plate to this side.