

ACCESSORY FITMENT

Product

Foton Tunland V7 PDC POLICE BAR

Part no.

BS-135023 TN : 645



90
Minutes

Models : DC

Page 1 of 6

Date : 27/10/2025

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	4	M10 x 100 SETS	H	4	M6 SPRING WASHERS
B	8	M10 x 25 SETS	I	8	M10 NYLOCK NUT
C	4	M6 x 25 SETS			
D	24	M10 x 30 x 2 F/WASHERS			
E	4	M6 x 16 F/WASHERS			
F	8	M10 HEX NUTS			
G	8	M10 SPRING WASHERS			

Additional equipment/Material needed for fitment :

Qty		Qty	
	Fitters Tool Box		

Precautions during fitment:

Do not damage the vehicle

Directions for use:

Read instructions

Fitment Instruction: Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration



Fig 1

Step #



Description/Method

1

Remove the grill and have the top bracket fitted as shown below, MIRROR onto the opposite side as well.


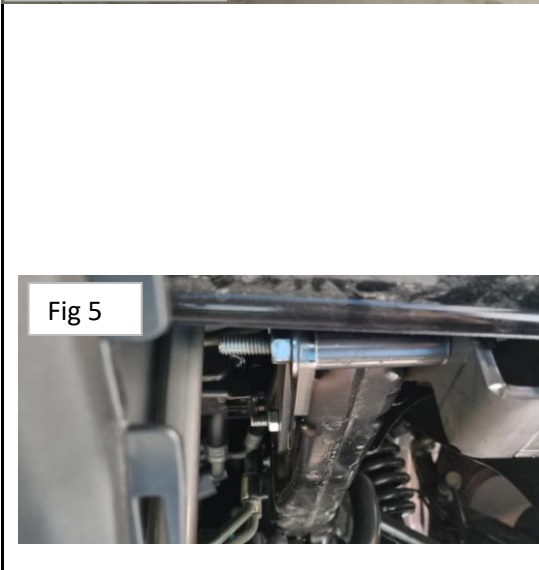
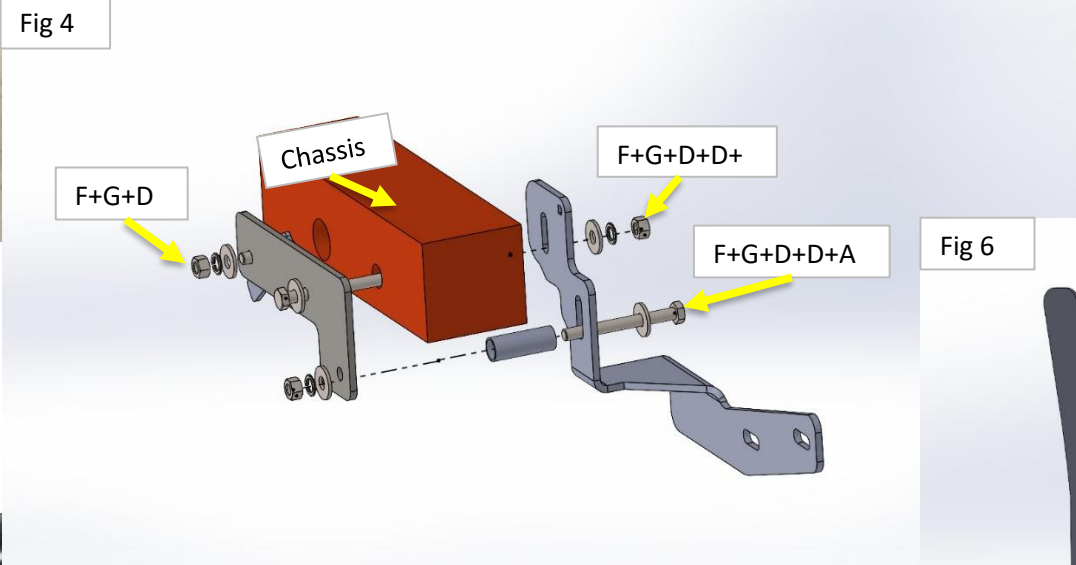
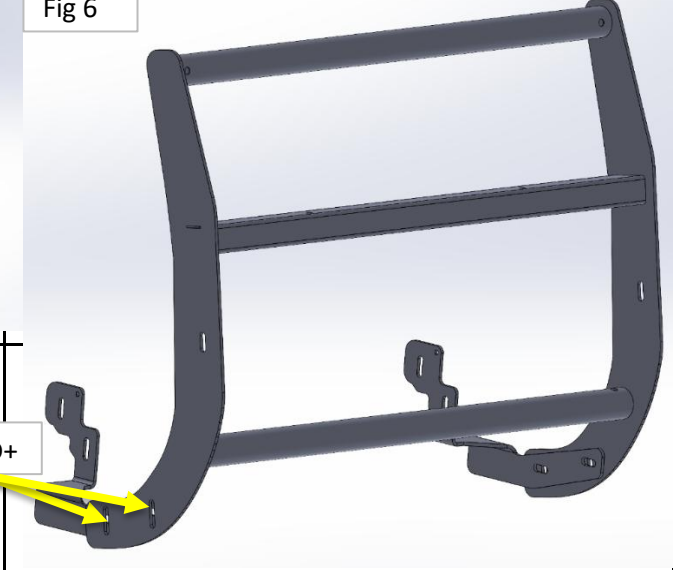
Fig 2

C+H+E

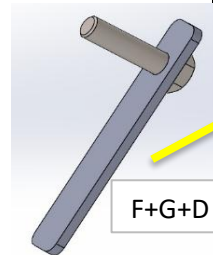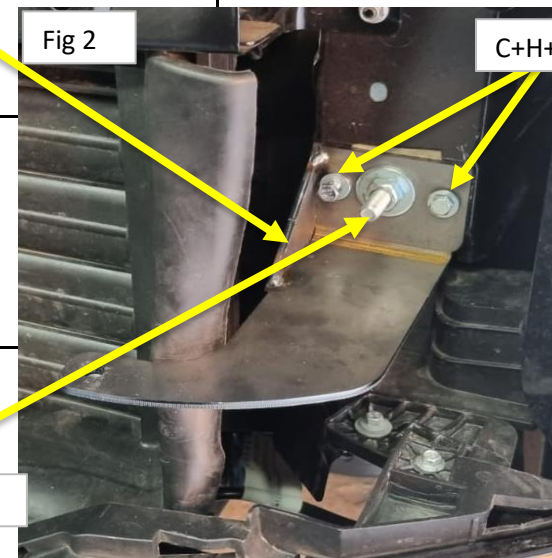

F+G+D

Fitment Instruction: Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration	Step #	Description/Method
 <p>Fig 3</p> <p>Passenger Side</p>	<p>2</p>	<p>Fig 4 shows the full assembly of the bottom brackets on the (passenger side), proceed to attach brackets onto the drivers side as well.</p>
 <p>Fig 5</p>		 <p>Fig 4</p> <p>Fig 6</p>  <p>B+D+D+</p>

Fitment Instruction: Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration

Step #

Description/Method

Fig 7



B+D+D+I

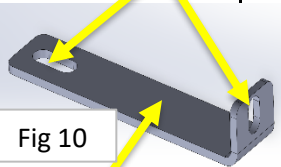


Fig 10

3

Loosley mount the top bolt on bracket onto the top bracket using the fasteners shown in Fig 9. Then place the grill back taking note of the exit postions of the bracket.

4

Using the M10 fastners and the M8 fastners you can attach the nudge as shown in Fig 8

Fig 8



B+D+D+I


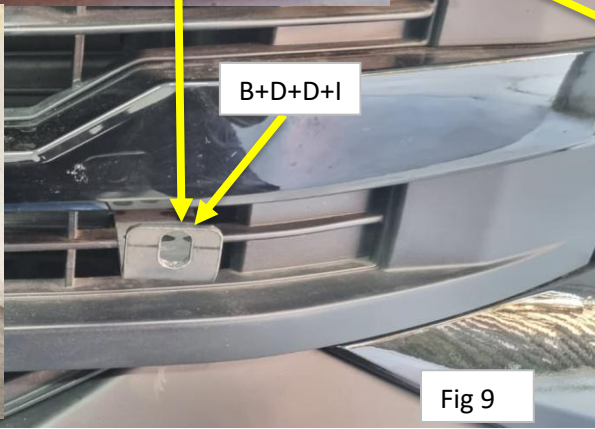


Fig 9

Fig 11

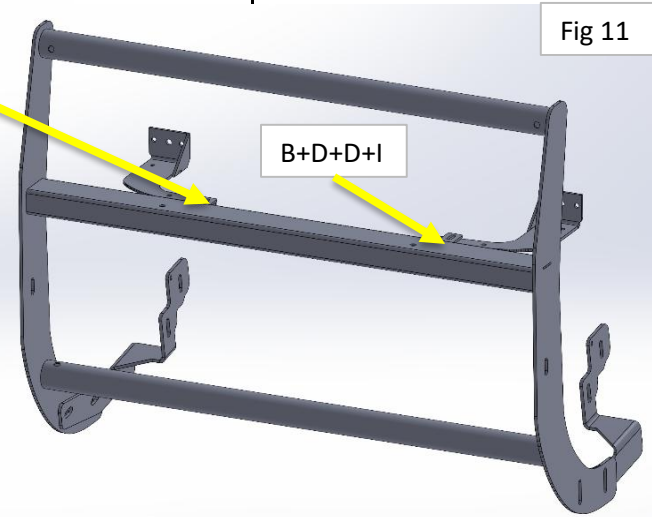

B+D+D+I


Fitment Instruction: Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration

Step #

Description/Method

Fig 12

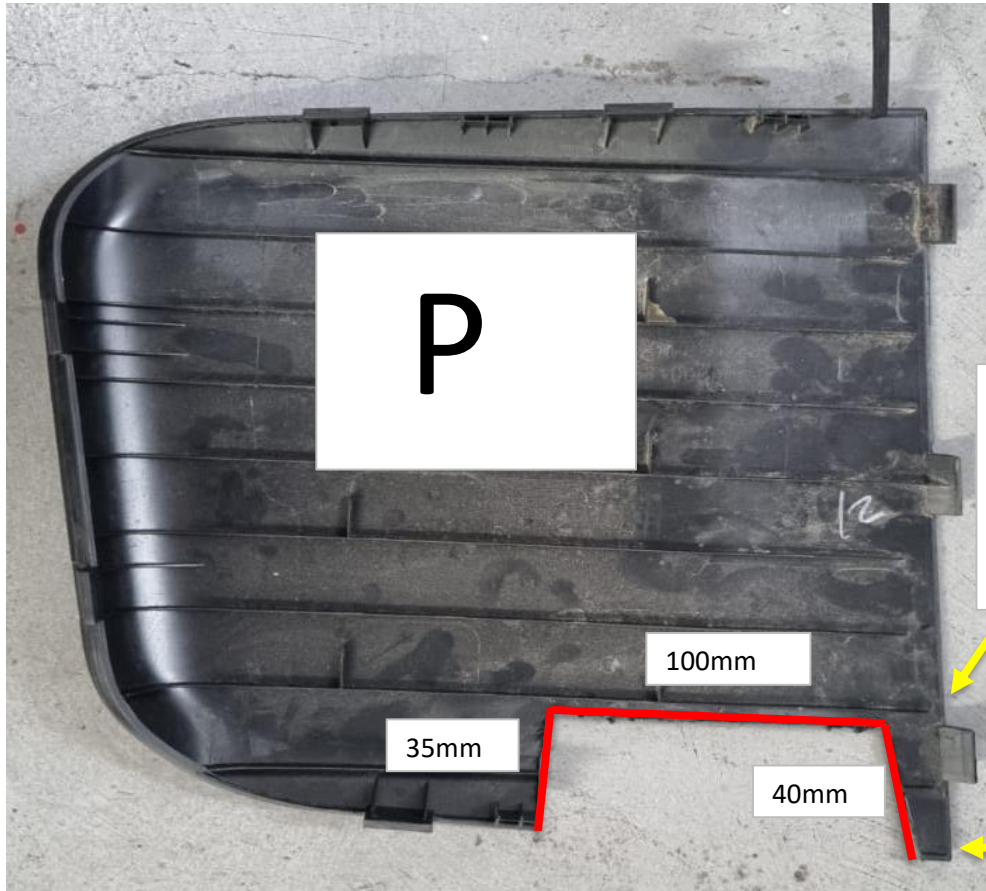

5

Using the Image on the left, measure and trim the plastic as shown. Repeat the process on the Driver side. If by any chance the plastic is rubbing against the bracket proceed to enlarge the trim to the desired size.

measure
15mm
from the
edge

measure
10mm
from the
edge

Fitment Instruction:
Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration

Fig 13



Step #

Description/Method

6

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

