

ACCESSORY FITMENT

Product

Foton Tunland V7 PDC POLICE BAR

Part no.

BS-135023 TN : 645



90
Minutes

Models : DC

Page 1 of 6

Date : 15/04/2026

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	4	M10 x 100 SETS	H	4	M6 SPRING WASHERS
B	10	M10 x 25 SETS	I	8	M10 NYLOCK NUT
C	4	M6 x 25 SETS			
D	26	M10 x 30 x 2 F/WASHERS			
E	4	M6 x 16 F/WASHERS			
F	8	M10 HEX NUTS			
G	10	M10 SPRING WASHERS			

Additional equipment/Material needed for fitment :

Qty		Qty	
	Fitters Tool Box		

Precautions during fitment:

Do not damage the vehicle

Directions for use:

Read instructions

Fitment Instruction:

Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration

Fig 1



Step #


Description/Method

1


Remove the grill and have the top bracket fitted as shown below, MIRROR onto the opposite side as well.

Fig 2

C+H+E

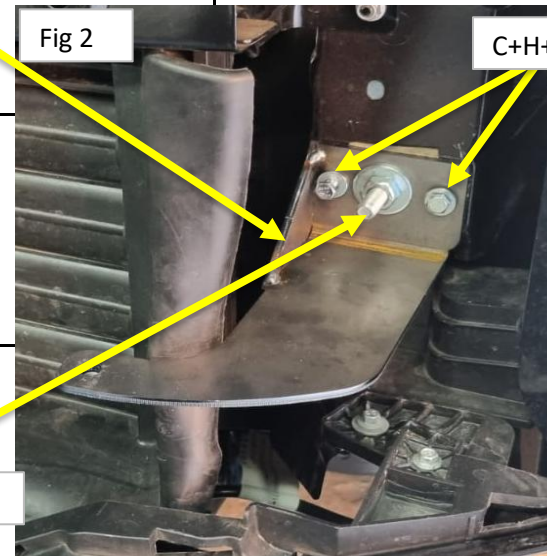

F+G+D

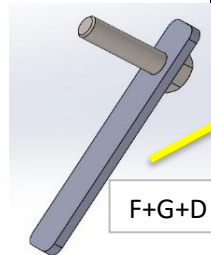

Fitment Instruction:

Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration

Step #

Description/Method

Fig 3



Fig 4

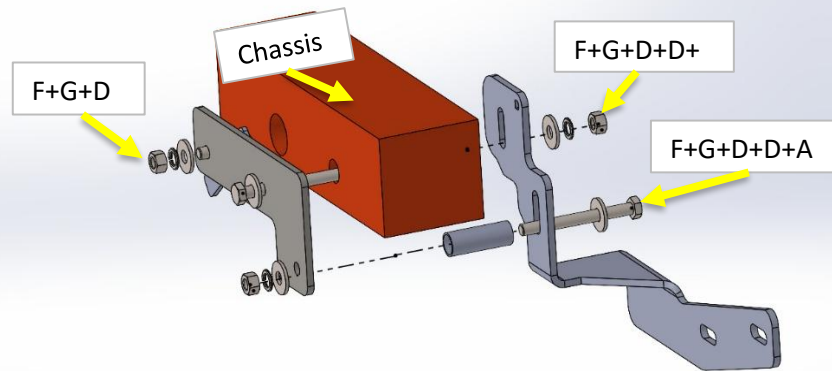


Fig 6

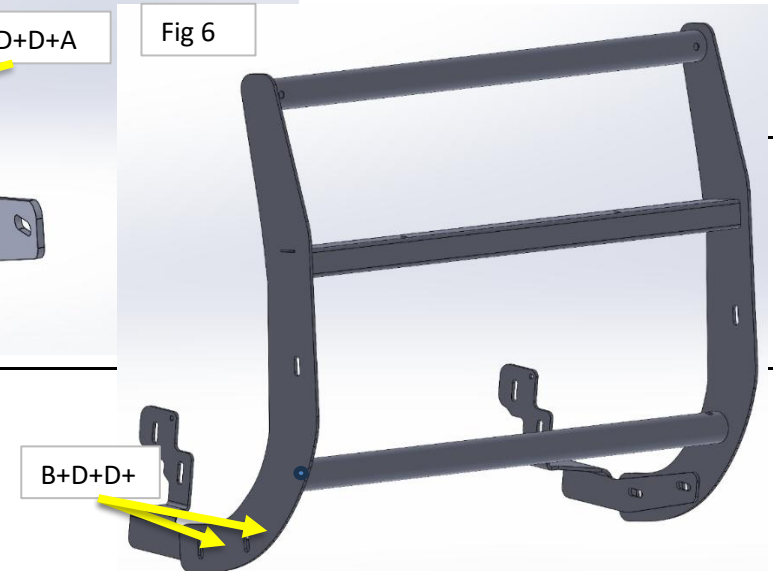


Fig 5



2

Fig 4 shows the full assembly of the bottom brackets on the (passenger side), proceed to attach brackets onto the drivers side as well.

Fitment Instruction:

Foton Tunland V7 PDC POLICE BAR

Visual / Graphic Illustration

Step #

Description/Method

Fig 7



B+D+D+I

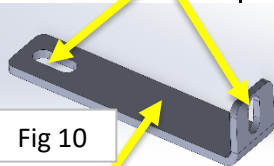


Fig 10

3

Loosely mount the top bolt on bracket onto the top bracket using the fasteners shown in Fig 9. Then place the grill back taking note of the exit positions of the bracket.

4

Using the M10 fastners and the M8 fastners you can attach the nudge as shown in Fig 8

Fig 8



B+D+D+I


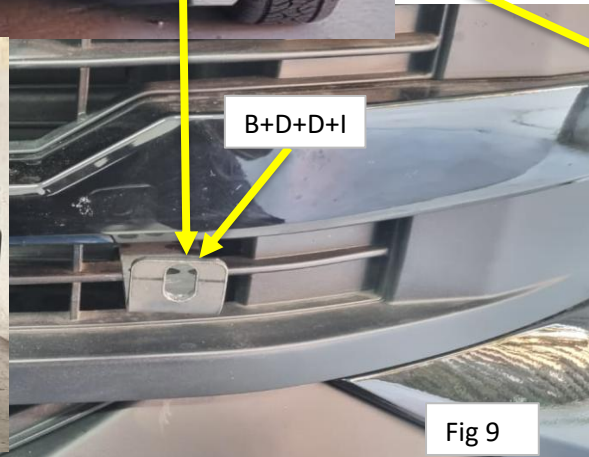


Fig 9

Fig 11

B+D+D+I

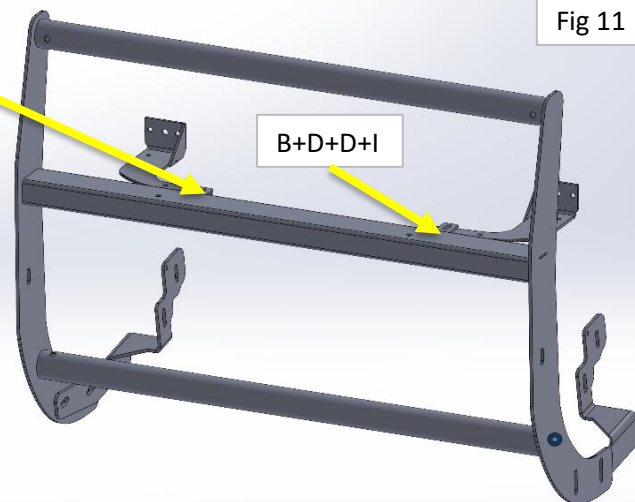


Fitment Instruction:**Foton Tunland V7 PDC POLICE BAR**

Visual / Graphic Illustration

Step #

Description/Method

Fig 12

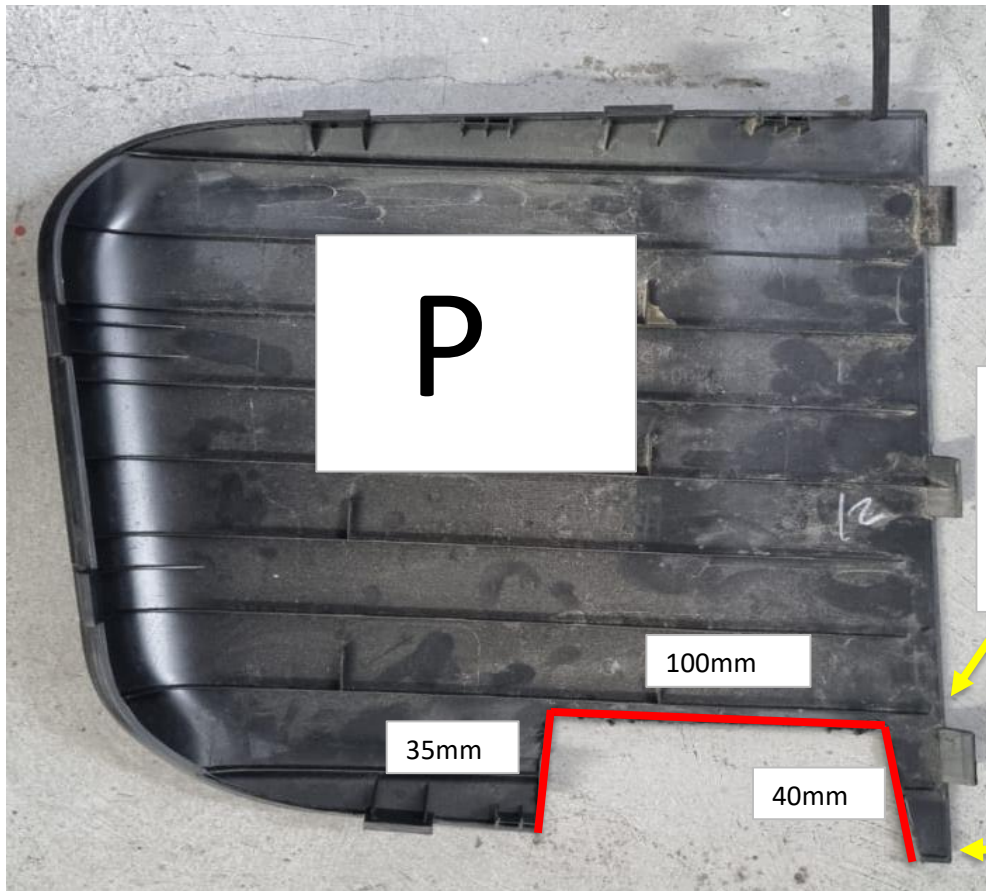

5

Using the Image on the left, measure and trim the plastic as shown. Repeat the process on the Driver side. If by any chance the plastic is rubbing against the bracket proceed to enlarge the trim to the desired size.

measure
15mm
from the
edge

measure
10mm
from the
edge

Fitment Instruction:**Foton Tunland V7 PDC POLICE BAR**

Visual / Graphic Illustration

Fig 13



NB: Ensure the bottom tube is tucked under the plastic of the bumper so that

Step #

Description/Method

6

Using the M10 fasteners you can now mount the bottom tube after the bar has been set into position. Make sure bar is centralised and tighten all fasteners to specified torque.



NB: Ensure that the bar is fitted as close to the bumper without touching it. A 10mm gap at the bottom is correct to clear the PDC sensors.