

ACCESSORY FITMENT

Product

Isuzu PDC Nudge 2026

Part no.

1600098-26 , VCROSS-26 , FLEET-1600098-26



60
Minutes

Models : 2026

Page 1 of 7

Date :

DIAGRAM



Kit content:

	Qty	Description		Qty	Description
A	2	M10 U- bolts	L	2	M10 black hex caps
B	4	M10 x 30 set screws	M	2	1 x PS & 1 x DS bottom main bracket
C	4	M10 x 40 set screws	N	2	1 x PS & 1 x DS join brackets
D	10	M10 Hex nuts	O	2	1 x PS & 1 x DS drop down brackets
E	18	M10 x 30 x 2 flat washers	P	4	12mm spacer
F	12	M10 spring washers	Q	1	Nudge bar
G	8	M8 x 25 set screws	R	2	16mm spacer
H	12	M8 x 22 x 1.6 flat washers			
I	8	M8 spring washers			
J	4	M8 hex nuts			
K	4	M8 black hex caps			




Qty		Qty	
	RATCHET & SOCKET SET		HACK SAW
	MASKING TAPE		

Precautions during fitment:

Do not cause any damage to the vehicle. Apply masking Tape to the front bumper prevent any scratches. Requires 2 people to fit. Ensure that you are wearing the appropriate PPE during Fitment.

Directions for use:

Read all instructions carefully before installation

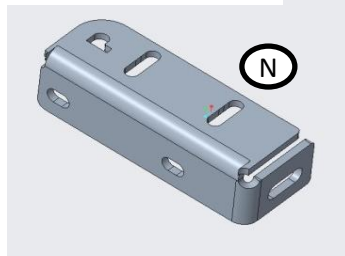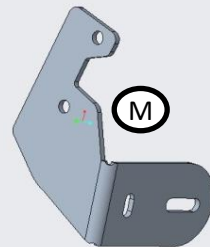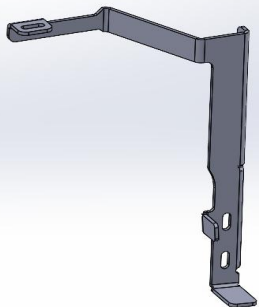

Fitment Instruction:
ISUZU DMAX Nudge bar

Visual / Graphic Illustration

Step #

Description/Method




1

Remove Front Plastic Under cover and trim as shown then return it back.

Fitment Instruction:
ISUZU DMAX Nudge bar

Visual / Graphic Illustration

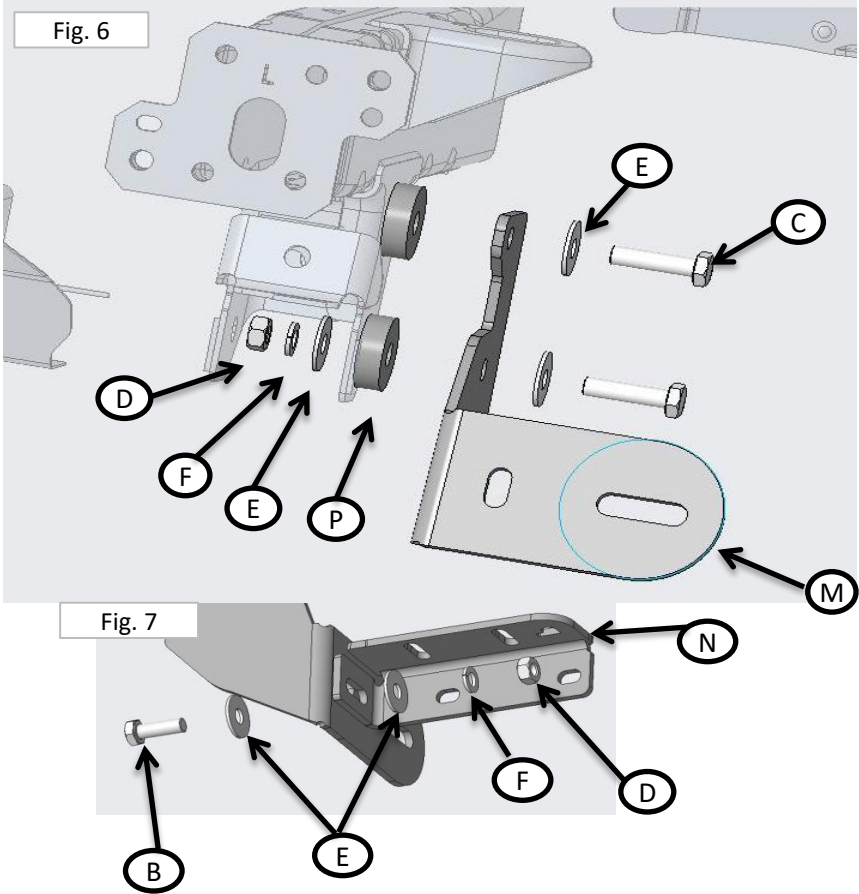

Step #

Description/Method

5

Locate PS Mounting Position on Chassis as shown in Figure 6

6

Fit PS Brackets with markings "P" as shown in Figure 6, Figure 7. Do not fully tighten yet.

Fitment Instruction:

ISUZU DMAX Nudge bar

Visual / Graphic Illustration

Step #

Description/Method

Fit the Top bracket to the inside of the chassis using the U-Bolt provided and fasteners provided. The image below shows you how it exits the chassis. Repeat on drivers side.



ISUZU DMAX Nudge bar

Visual / Graphic Illustration

Fig. 11


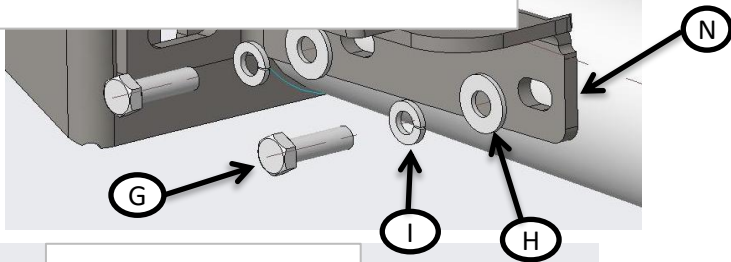


Fig. 12

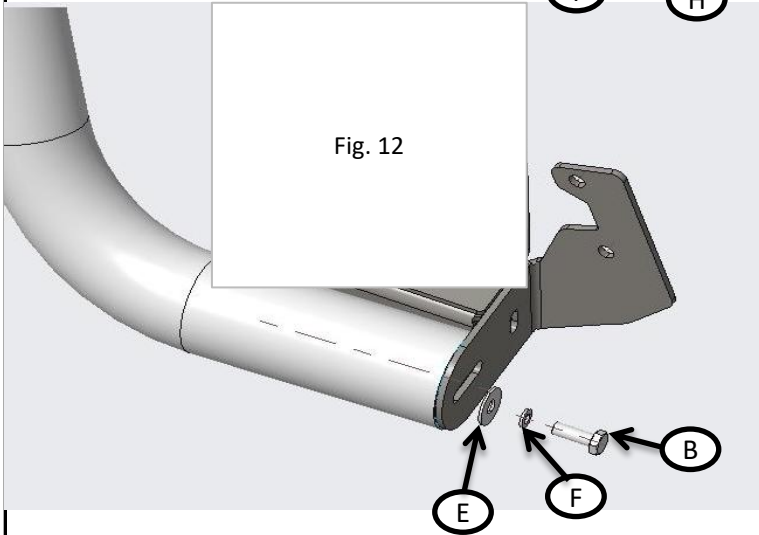

Step

Description/Method

Once you have both side brackets mounted proceed to step 9 below

9

Place Nudge bar to brackets and assemble as shown in Figure 11 & 12.

11

Ensure Nudge is centre and lift Nudge bar so there is a 10-12mm gap between bar and bumper then fully tighten.

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

