

ACCESSORY FITMENT

Product

BYD SHARK PDC nudge bar

Part no.

(BS-19001) TN : 679



60
Minutes

Models :2026

Page 1 of 5

Date :23/06/2026

DIAGRAM



Kit content:

Qty	Description	Qty	Description
4	M12 x 45 x 1.25(Fine Thread) SETS		
4	M12 SPRING WASHER		
4	M10 SPRING WASHER		
4	M10 x 40 x 3 FLAT WASHERS		
4	M12 x 30 x 2 FLAT WASHERS		
4	M10 NYLOCK NUTS		

Additional equipment/Material needed for fitment :

Qty		Qty	
	Fitters tool Box		

Precautions during fitment:

Don't scratch the car


Directions for use:

Read instructions fully

Fitment Instruction:

BYD PDC nudge Bar

Visual / Graphic Illustration

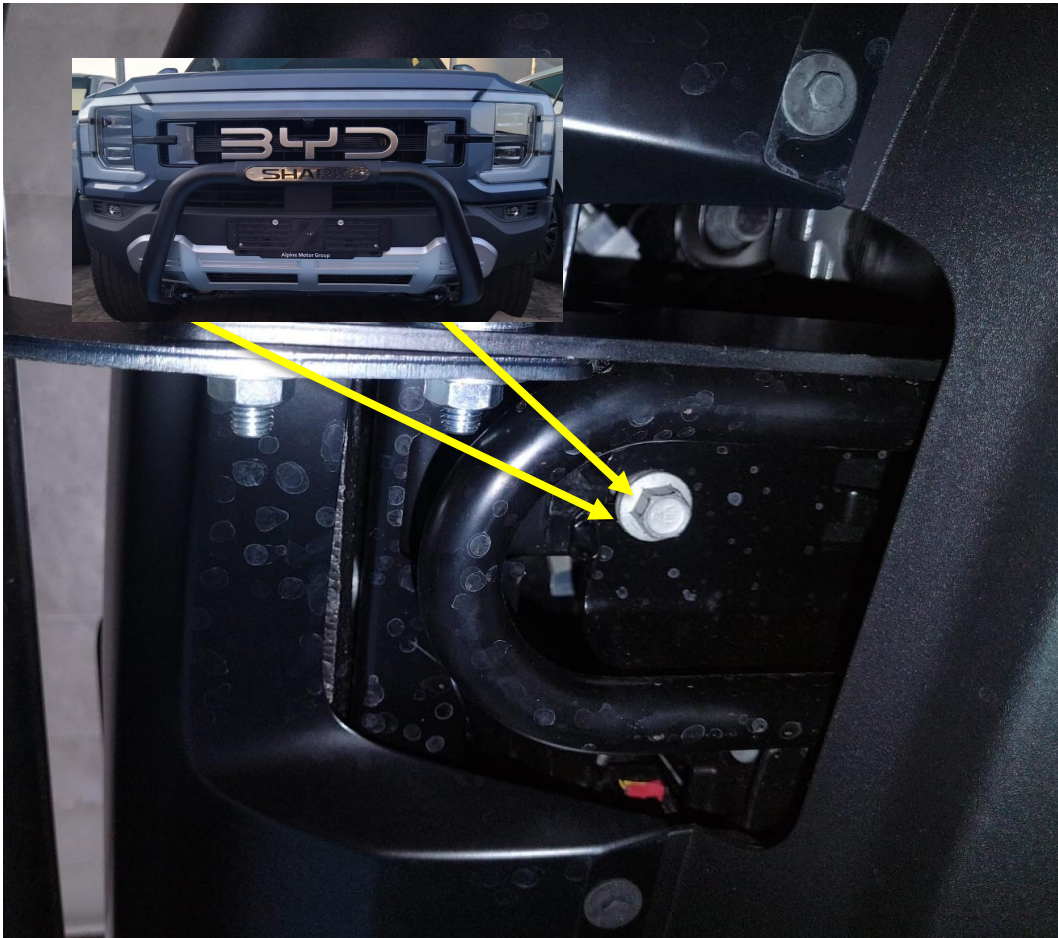

Step #

Description/Method

1

Remove the Toweye

Ensure all brackets are fitted loosley until the end.

Fitment Instruction:

BYD PDC nudge Bar

Visual / Graphic Illustration

Step #


Description/Method

2

Sandwich the passenger side bracket between the chassis and the toweye as shown using M12 fastners provided. Discard original bolts

3

Repeat process in the Drivers side

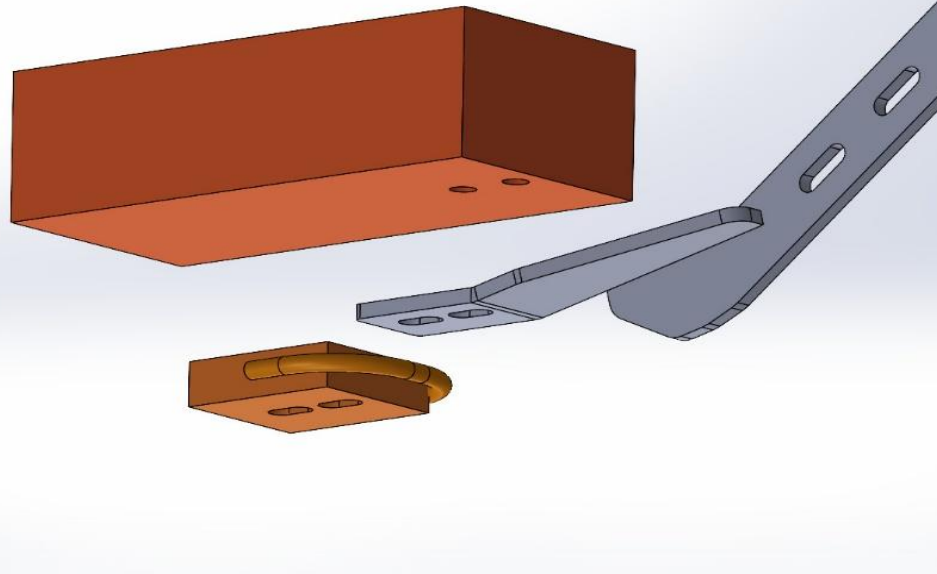

Passenger side

Fitment Instruction:
BYD PDC nudge bar

Visual / Graphic Illustration

Step #

Description/Method

4

Attach the nudge bar onto the 2 protruding mild steel brackets using the M10 x 30 sets and M10 fasteners.





Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

