

ACCESSORY FITMENT

Product

Hilux Honeycomb Nudge Bar

Part no.

80092T-26, BS-80092-26




60
Minutes

Models : Double Cab

Page 1 of 6

Date : 09-07-2026

DIAGRAM

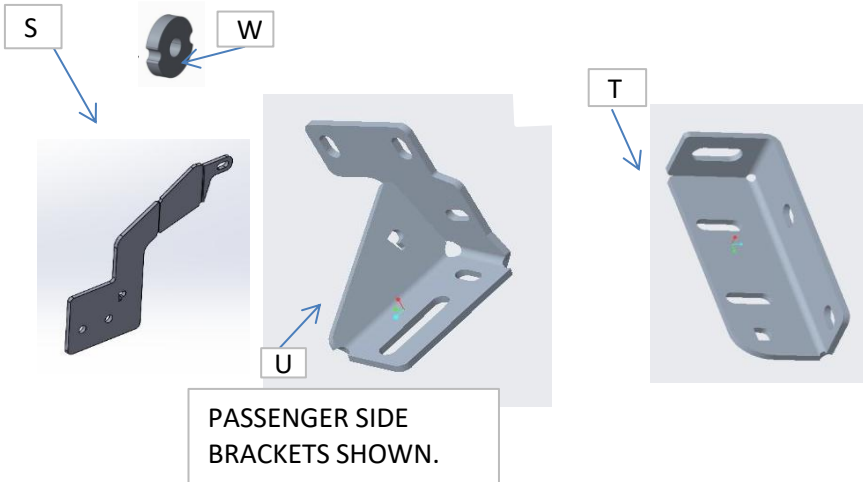

Kit content:

	Qty			Qty	Description
A	2	M12 X 50 X 1.25 SET	N	2	M8 HEX NUT
B	2	M12 X 40 X 1.25 SET	O	2	M10 X 30 SET
C	4	M12 SPRING WASHERS	P	4	M10 X 30 X 2.5 FLAT WASHER
D	4	M12 X 30 X 2.5 FLAT WASHERS	Q	2	M10 SPRING WASHERS
E	2	M10 X 30 SET	R	6	M10 HEX NUTS
F	2	M10 X 40 X 3 FLAT WASHERS	S	2	Chassis Mount Bracket
G	2	M10 SPRING WASHERS	T	2	Nudge bar Front Mount Bracket
H	4	M10 X 100 SET	U	2	Nudge Bar Bottom Mount Bracket
I	8	M10 X 30 X 2.5 FLAT WASHER	V	2	Clamp Plate
J	4	M10 SPRING WASHERS	W	2	SPACER
K	6	M8 X 25 SET			
L	8	M8 X 20 X 1.6 FLAT WASHERS			
M	6	M8 SPRING WASHERS			
Qty	1	Ratchet Set	Qty		
	1	Spanner Set			
	1	Torque Wrench			

Precautions during fitment:

Please take precaution when installing Nudge Bar to prevent any damages to the vehicle and the Nudge Bar

Directions for use:

Please follow the steps below, numbered 1 to 8

Fitment Instruction: Toyota Hilux Nudge Bar

Visual / Graphic Illustration

Step No.

Description/Method

Figure A

Figure 1

Trim along the bend

Note: remove dust cover (Figure A) before starting fitment . Trim and Replace when done.

Drivers SIDE
BRACKETS SHOWN.

Chassis

H

I

NB: Ensure you bolt
through the front hole
nearest to the slam

S

1

Place the Drivers side Mounting Bracket to the outside of the chassis and the Clamp Bracket on the inside. Ensure you bolt through the front hole nearest to the slam track.

2

Insert the Fasteners as shown in Figure 1. Do not tighten fully.

Fitment Instruction: Toyota Hilux Nudge Bar

Visual / Graphic Illustration

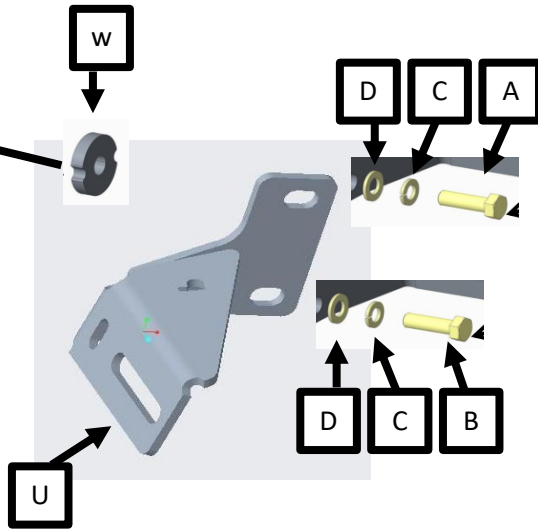


Figure 2

Step No.

Description/Method

Step 3

Mount the bracket(U) to the chassis, ensure that you use the spacer(W) for the top hole

Step 4

Insert Fasteners as shown in Figure 2.
Do not tighten fully.

Fitment Instruction: Toyota Hilux Nudge Bar

Visual / Graphic Illustration

Step No.

Description/Method

Step 5

Mount bracket(T) to bracket(U) using the fastners shown in Figure A.
Mount bracket(S) to bracket(T) using fastners shown on Figure B.


Step 6

Repeat steps 1 to 5 on the driver's side of the vehicle.

Figure 3

Figure B

Figure A

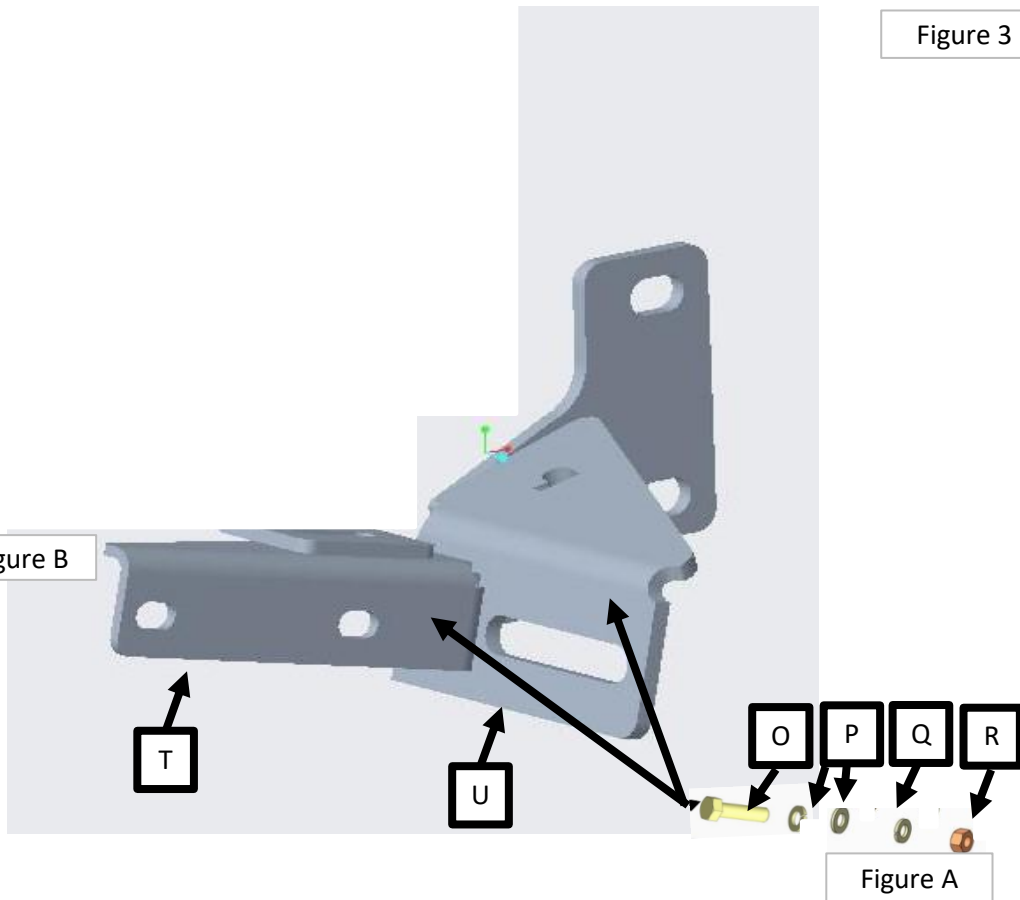


Fitment Instruction:

Toyota Hilux Nudge Bar

Visual / Graphic Illustration

Figure 4

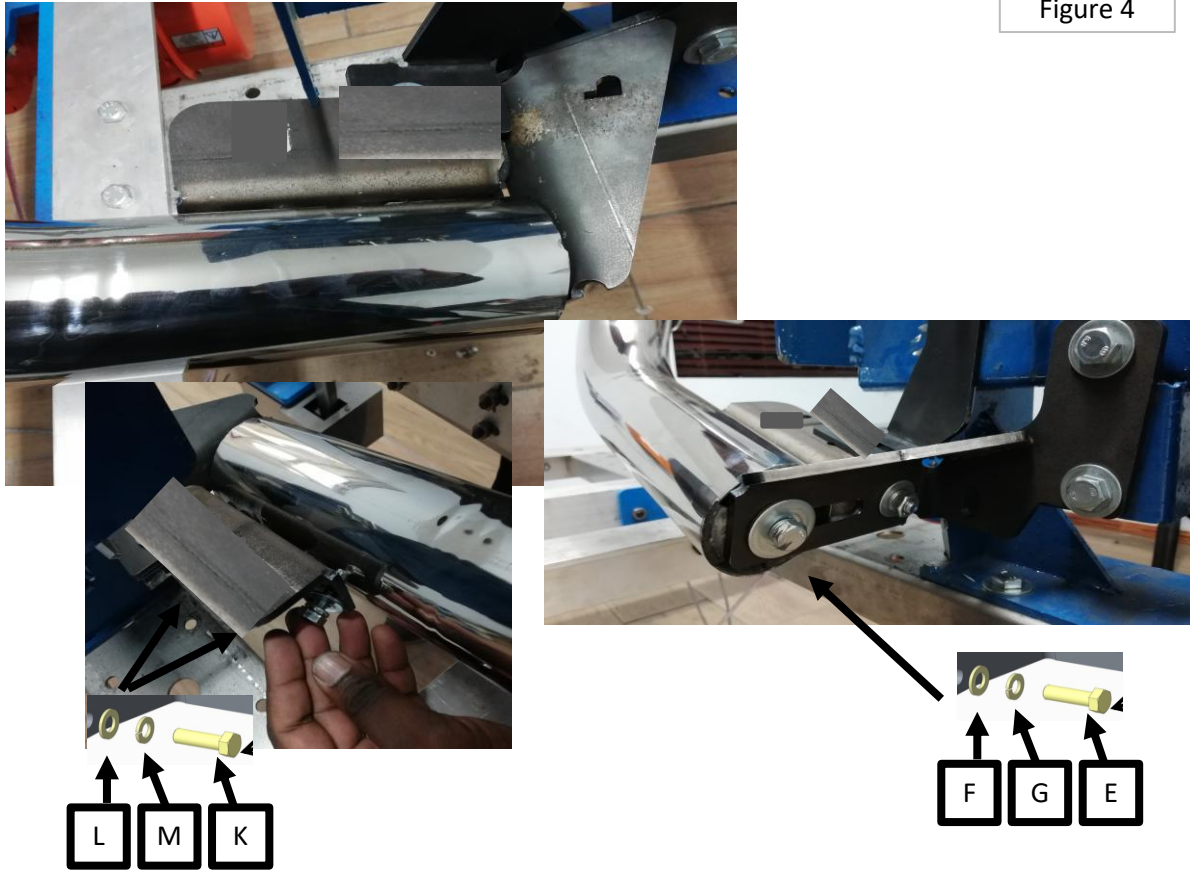

Step No.

Description/Method

Step 7

Place the Nudge Bar against the Chassis Mount Bracket and insert fasteners as shown in Figure 4. Do not tighten fully.

Final step

Page 6 of 6

Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.



Make sure bar is centralised and tighten all fasteners to specified torque. M8= 22Nm , M10= 42Nm , M6= 9Nm.

